Solar-Log™
by Solare Datensysteme GmbH

User Manual

Solar-Log1000

MAXIMIZED SUNPOWER

Contents

1	**General information**	**6**
2	**Operation using the web browser in your own network**	**7**
2.1	Requirements	7
2.2	Overview	8
2.2.1	Navigation overview	8
2.2.2	Homepage	9
2.3	Calling up yield data	10
2.3.1	How to navigate within the overviews	10
2.3.2	What the values in the overviews mean	11
2.3.3	Day overview	12
2.3.4	Month overview	14
2.3.5	Year overview	15
2.3.6	Total overview	16
2.4	Calling up yield data on a mobile computer	18
2.4.1	Day	19
2.4.2	Month	19
2.4.3	Year	20
2.5	Calling up the diagnosis function	21
2.5.1	Calling up and filtering the event log	22
2.5.2	Displaying the decrease in output for your plant	24
2.5.3	Pac Correction Factor	26
2.5.4	Calculating the PAC correction factor	26
2.5.5	Example calculation	27
2.6	Changing settings in the configuration menu	28
3	**Operation using the touchscreen**	**29**
3.1	Overview	30
3.1.1	Navigation overview	30
3.1.2	How to navigate the touchscreen	31
3.2	Calling up yield data	32
3.2.1	How to navigate within the overviews	32
3.2.2	What the values in the overviews mean	32
3.2.3	Daily chart	34
3.2.4	Month chart	36

3.2.5	Year chart	37
3.2.6	Total chart	39
3.2.7	Large display	40
3.2.8	Power balance	41
3.3	Calling up the analysis function	42
3.3.1	Calling up messages	42
3.3.2	Showing inverter events	43
3.3.3	Processing the alarm messages	44
3.3.4	Optimising your own power consumption	45
3.4	Using data transfer via USB	48
3.4.1	Saving current data on the USB stick (copying data)	48
3.4.2	Performing data back-up	49
3.4.3	Updating the firmware	53
3.5	Changing settings in the configuration menu	54
4	**E-mail Notification**	**55**
4.1	Yield E-mail	55
4.2	Performance Monitoring	59
5	**Using Solar-Log WEB**	**65**
5.1	Register with Solar-Log™ WEB "Classic 2nd Edition"	65
5.2	Calling up plant data	68
5.3	Calling up yield data	72
5.3.1	How to navigate within the overviews	72
5.3.2	What the values in the overviews mean	72
5.3.3	Day overview	72
5.3.4	Month overview	74
5.3.5	Year overview	75
5.3.6	Overview of all years	77
5.3.7	Calling up and filtering the event log	78
6	**Using the Solar-Log™ APP iPhone V3 for iPhones**	**80**
6.1	Installing the App	81
6.2	Add plants	82
6.3	Retrieving Yield Data	83
6.3.1	How to navigate between different time periods	84

6.4	The top menu bar	85
6.5	The bottom menu bar	87
6.5.1	Day	87
6.5.2	Monthly Overview	88
6.5.3	Annual Overview	89
6.5.4	Total Overview	90
6.6	Viewing CO_2 Savings	91
6.7	Retrieving Plant Data	92
6.8	The Yield Data as a Slide Show	94
6.8.1	Start the Slide Show	96
7	**Using the Solar-Log™ Android App**	**97**
7.1	Installing the App	97
7.2	Add plants	98
7.3	Plant Settings	100
7.3.1	S0 meter	100
7.3.2	Management	101
7.4	The Toolbar	102
7.5	Retrieving Yield Values	104
7.5.1	Daily Overview	105
7.5.2	Monthly Overview	106
7.5.3	Annual Overview	107
7.5.4	Total Overview	108
7.6	Viewing CO_2 Savings	108
7.7	App Settings	109
7.7.1	Periodical data update	111
7.7.2	Reset	112
7.7.3	Slide show	113
7.7.4	Legal Disclaimer	114
7.8	The Yield Data as a Slide Show	115
7.9	Using the Android App with a Smartphone	116
7.9.1	Smartphone vertical format	117
7.9.2	Smartphone - horizontal format	118
7.9.3	Solar-Log™ Widget for Smartphones	119
8	**Cleaning and care**	**121**

8.1	Cleaning tips	121
8.2	Care tips	121
9	**Malfunctions**	**122**
9.1	Status display for the LEDs	122
9.2	Remedying faults yourself	123
9.2.1	Obtaining information from the internet	125
9.2.2	Informing a specialist technician	125
10	**Disposal**	**126**
11	**Technical data**	**127**
Glossary		**128**

1 General information

This user manual is intended to assist you in the operation of the Solar-Log^{1000}. The yield data for the Solar-Log^{1000} can be displayed in several ways:

- via a web browser in a local network (↗page 7) or
- via the touchscreen directly on the device (↗page 10) or
- via the internet (↗page 65) or
- via the Solar-Log™ APP for iPhone (↗page 80).

2 Operation using the web browser in your own network

2.1 Requirements

Information

For faster access, enter "solar-log" in the address line of the browser and create a bookmark.

In the local network

To operate the Solar-Log^{1000} using a web browser you will need to be on a computer that is connected to the same local network as the Solar-Log^{1000} . This computer will also need to have a modern web browser installed on it.

You are also able to operate the Solar-Log^{1000} on a mobile device such as a tablet, smartphone. This device must also be connected to the same local network as the Solar-Log^{1000}. It must also have a modern web browser installed on it.

Via the internet

In addition to the computer or mobile computer with a web browser you need an active internet connection as well as a user account on a server.

- To set up a user account please contact your solar technician or find out more on our homepage under

http://www.solar-log.com/en/products-solutions/solar-log-web.html

2.2 Overview

2.2.1 Navigation overview

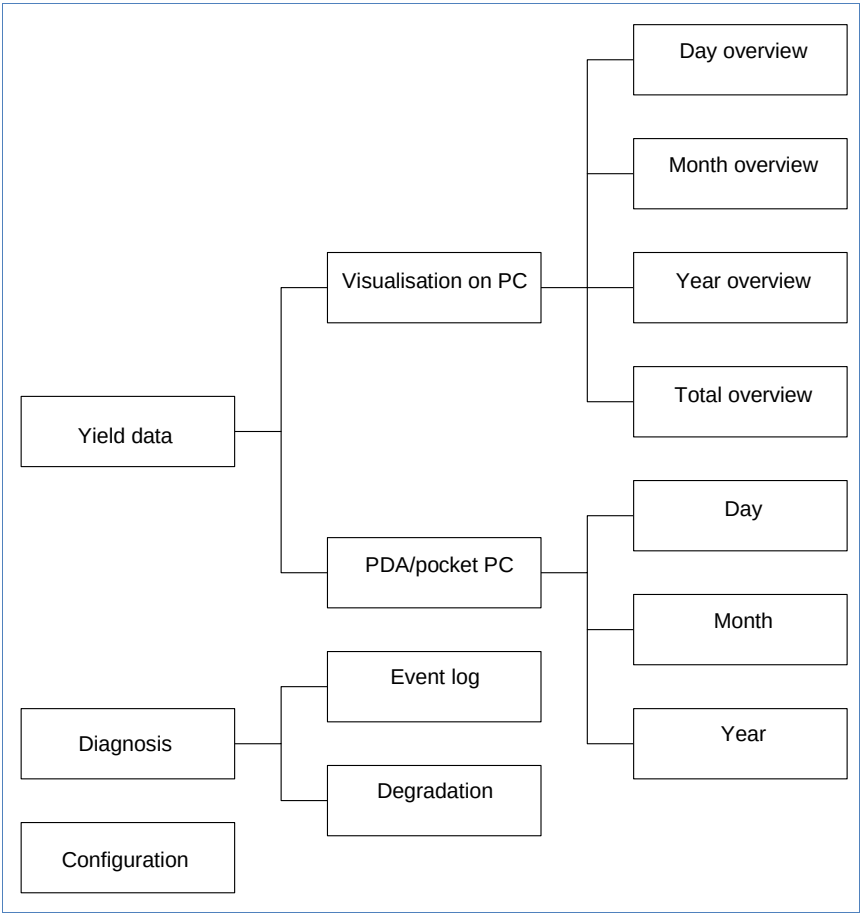

2.2.2 Homepage

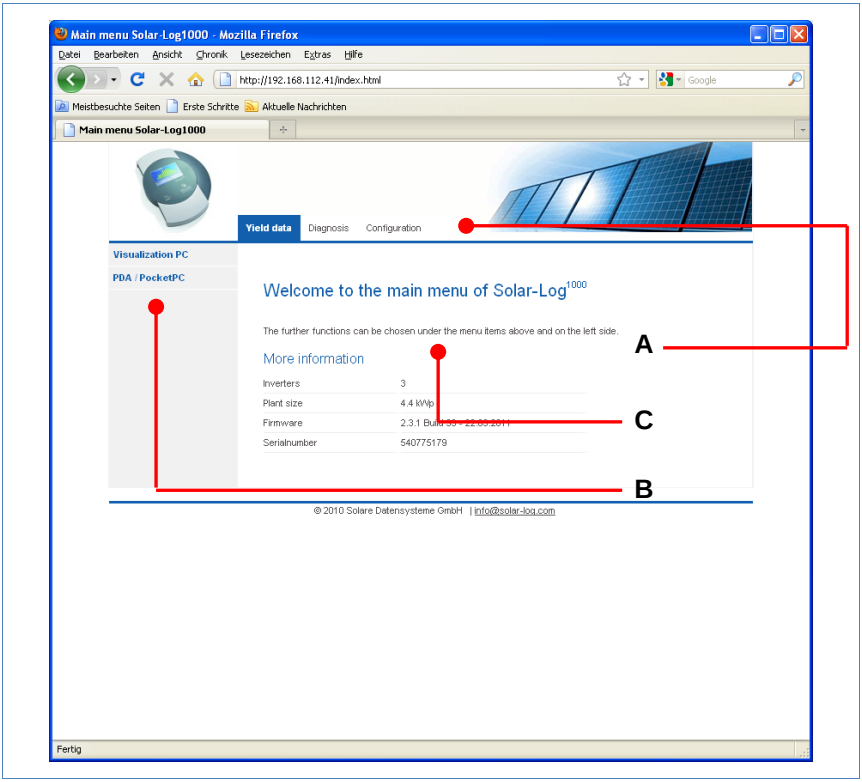

The homepage contains the following areas:

- Main navigation menu (A)
- Navigation bar (B)
- Information field (C)

Main navigation menu

The main navigation menu contains three main operating groups:

- **Yield data**: Here you will find the yield information within certain periods of time such as day, month, year and the total yield to date of your plant.

- **Diagnosis**: Here you can call up the fault and process reports as well as filter according to desired criteria.
- **Configuration**: Here you can change the settings of your device as required.

Left navigation bar

Depending on the selected field in the main navigation menu you can access additional functions in the left navigation bar.

Information field

Device configuration will take place in this area. When viewing yield information an additional window will pop up and yield information can be found there.

2.3 Calling up yield data

1 Start the web browser and enter "solar-log" in the address line of the browser or select the bookmark in the browser's navigation bar.
→ The homepage is displayed.

2 Select **Visualization PC** in the left navigation bar.
→ The output details for the current day are displayed in a new window.

2.3.1 How to navigate within the overviews

Symbol	Meaning
	Arrow keys: used to navigate to the previous or next period of time shown. Magnifying glass symbol: used to update the modified parameters.

Symbol	Meaning
	Information on the inverter that is connected. Hold the cursor over a field to display the specific values.
	Display of additional information on the plant (↗page 11).

1 Click inside the colored area of the connected inverter or the desired yield values.

2 Click on the magnifying glass symbol.
→ The overview is updated and the yield information for the inverter or the yield values is shown in the selected overview, as a line.

3 Move to the next overview by clicking on the information under the heading.

4 Close the yield data window.
→ This allows you to return to the main menu.

2.3.2 What the values in the overviews mean

Description	Unit	Meaning
Power input Pac	W	The current power input P on the AC voltage side
Generator output Pdc	W	The current power input P on the DC voltage side (solar generator)
Inverter efficiency η	%	The current efficiency from the generator output and the power input. The manufacturer's specifications regarding the efficiency of the inverter can be checked here.

Description	Unit	Meaning
Status / Error		Status and error codes for the inverter. The codes shown are dependent on the manufacturer and must be looked up in the manual for the respective inverter. Status messages that are the same are collated.
Yield	kWh	The yield for the period of time shown (day, month, year, total)
Yield, specific	kWh/kWp	The output divided by the plant size. This value is a good reference value with respect to other plants.
Maximum value	W	The maximum output value within the period of time shown.
Target	kWh	The device runs a forecasting statistics function that specifies a certain target value for each time period. If the target value is attained or exceeded the forecast output has been achieved.
Actual	%	The actual value shows the percentage share for the actual yield and the target yield.

2.3.3 Day overview

- Select **Overview Daily** in the left navigation bar.

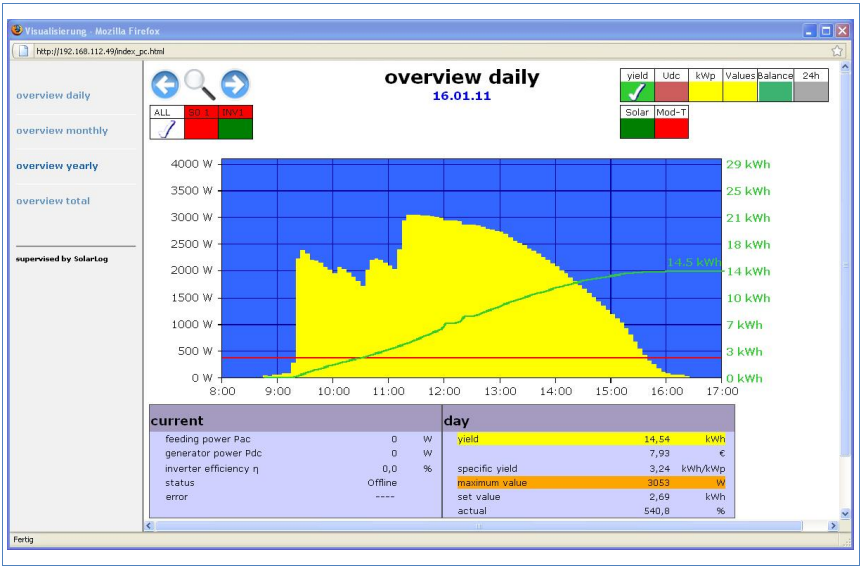

The daily yields are shown in a curve chart. The red line shows the target value for each day.

Buttons for the day overview

- **Yield**: Yield line via which the yield trend can take place. In addition, a red line is displayed as the total daily target.
- **Udc**: Generator voltage. To display voltage of the individual strings only one inverter may be selected.
- **kWp**: Converting the scaling from "Output in watts" to "Output in kWh/kWp". This makes all of the curves comparable in terms of their specific output. This also makes it easier to identify decreased outputs from specific inverters/strings.
- **°C / °F** : Display showing the inverter's internal temperature. This allows you to check that the fans are functioning correctly. **Please note that inverters are designed to have high internal temperatures.**
  The temperature display is shown only for inverters that provide the corresponding measured value.

- **24h**: Display showing the output over 24 hours of the day for a complete visualisation of the power consumption over the course of one day.

Additional functions using S0 meter reader

The following displays are also available to you by connecting an S0 meter to the Solar-Log™:

- **S0**: Shows the power consumption for your building as a graph, in watts.
- **Cons**.: Shows the power consumption for your building as a rising line, in kWh.
- **Values**: Shows various values for your inverter in text form.
- **Balance**: Shows you the ratio of your power consumption to your power yield. In the lower left text field the ratio is also shown as a percentage.

Additional functions with the sensor box

- **Solar**: Shows the reference value of an irridation sensor. The daily output of the plant must be within the measuring range of the sensor.
- **Mod T**: Shows the module temperature. The temperature is detected by the sensor box.

2.3.4 Month overview

▸ Select **Overview Monthly** in the left navigation bar.

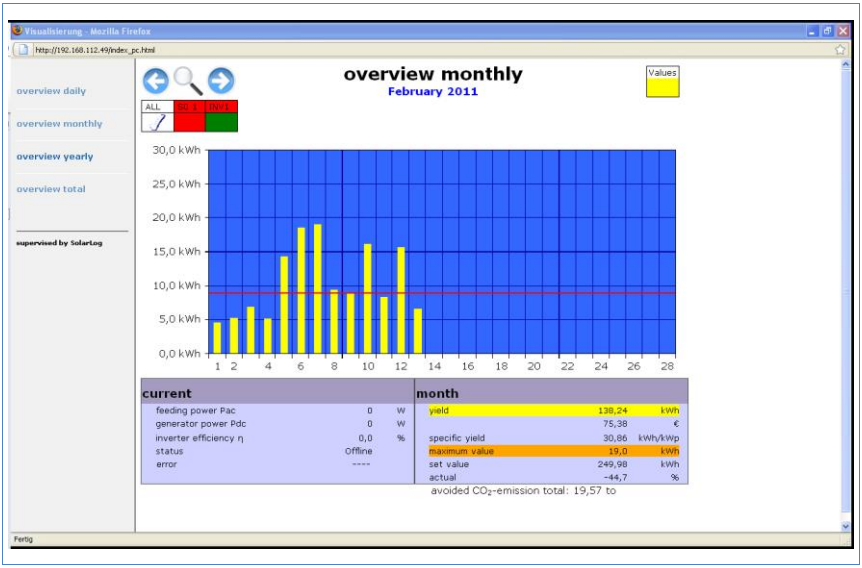

The daily yields for one month are shown as a total in a bar graph. The red line shows the target yield for each month.

1 Move the mouse over a day bar.
→ The corresponding day's yield is shown.

2 Click on an individual bar to switch to the corresponding day overview.

2.3.5 Year overview

- Select **Overview Yearly** in the left navigation bar.

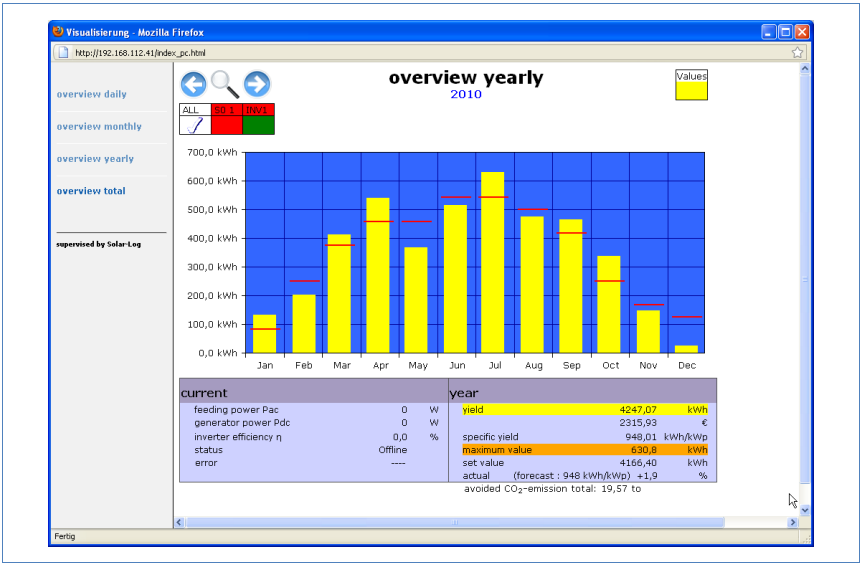

The individual monthly yields are shown as a total in a bar graph. The red line shows the target yield for each month.

The "Forecast" value is calculated using the yields already achieved for the year and is then projected using the target yields for the remaining months of the year.

1 Move the mouse over a month bar.
→ The corresponding month's yield is shown.

2 Click on an individual bar to switch to the corresponding month overview.

2.3.6 Total overview

- Select **Overview Total** in the left navigation bar.

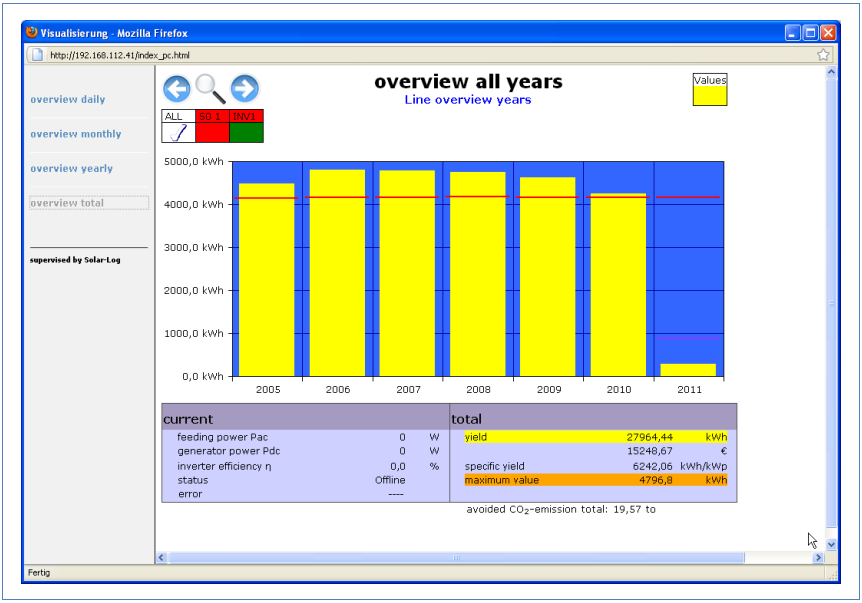

The individual annual yields are shown as a total in a bar graph. The red line shows the total target yield. For the current year two red lines are shown:

- The top line shows the annual target.
- The bottom line shows the annual target accumulated to the present day.

1 Move the mouse over a year bar.
→ The corresponding year's yield is shown.

2 Click on an individual bar to switch to the corresponding year overview.

3 Click on **Line overview, years** to display a line view for the total yield.

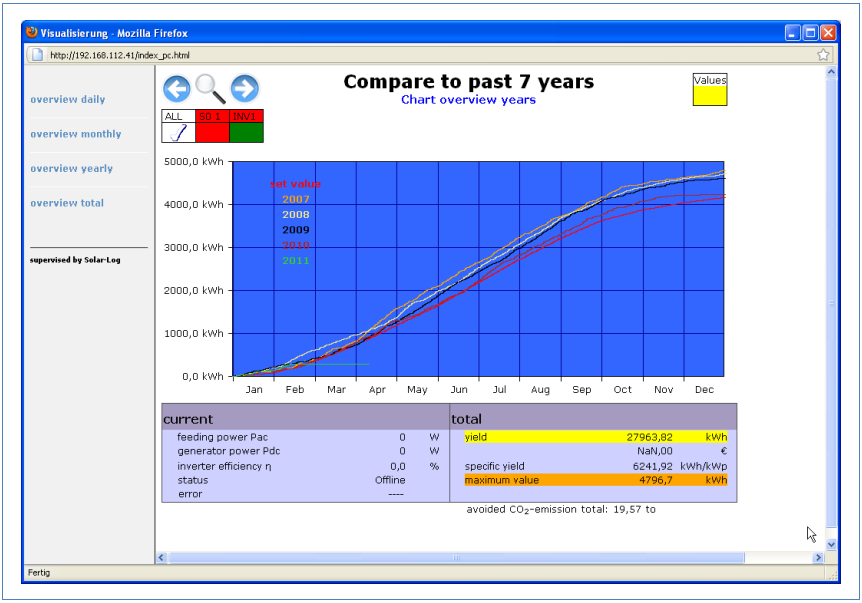

4 Click on **Chart overview, years** to display a bar view for the total yield.

2.4 Calling up yield data on a mobile computer

You can also call up the current yield data for your plant via mobile computer (e.g. smart phone). To do this your smart phone logs onto the internet or your local server and calls up your data.

Note

This function is only available in the local network or for plants which run on our "Classic 1 Server".

Please note that additional costs for the internet connection may be charged by your mobile service provider.

1 Start the web browser on the mobile computer and enter "solar-log" or the IP address for the Solar-Log™ in the address line of the browser or select the bookmark in the browser's navigation bar.
→ The homepage is displayed.

2 Select **PDA/Pocket PC** in the left navigation bar.

2.4.1 Day

- Select **Day** in the left navigation bar.

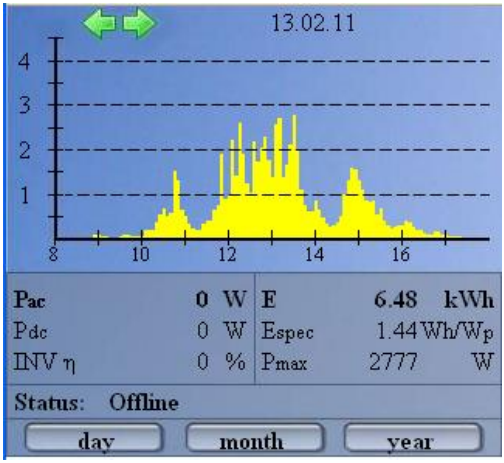

The updated yield data for the day is shown.

2.4.2 Month

- Select **Month** in the left navigation bar.

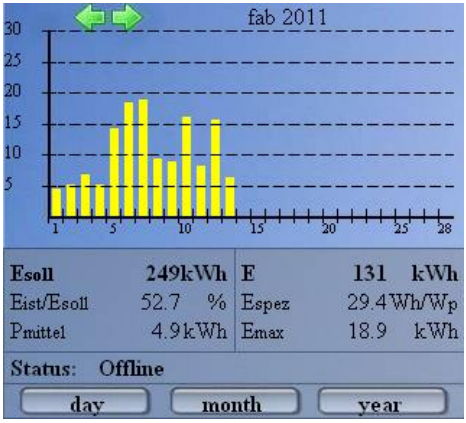

The yield data for the current month is shown.

2.4.3 Year

- Select **Year** in the left navigation bar.

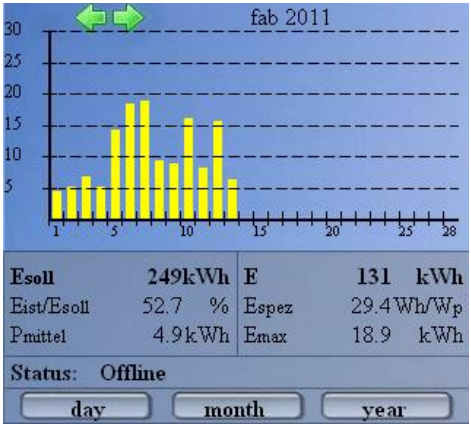

The yield data for the previous year is shown.

2.5 Calling up the diagnosis function

With the diagnosis function you are accessing the device's event log. You can display a total overview of all of the errors, malfunctions and status changes that have occurred for the connected inverters. You can also filter them according to your desired criteria.

Moreover, the diagnosis menu also shows you the decrease in output ("degradation") of your plant.

1 Start the web browser and enter "solar-log" in the address line of the browser or select the bookmark in the browser's navigation bar.
→ The homepage is displayed.

2 Select **Diagnosis** in the main navigation menu.
→ The event log is shown.

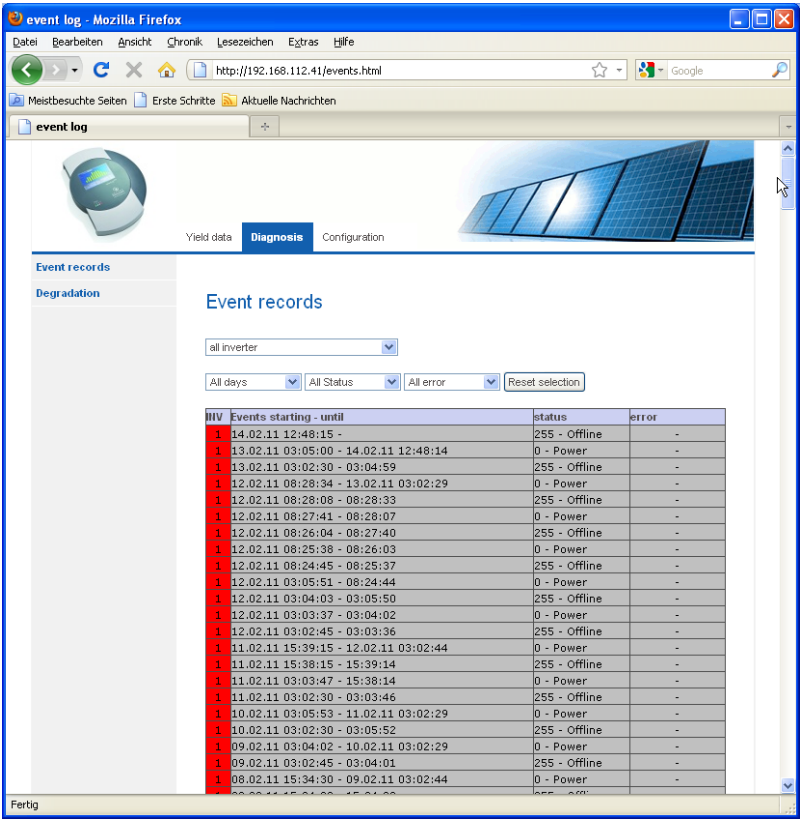

2.5.1 Calling up and filtering the event log

- Select **Even log** in the left navigation bar.
  → The complete list of all system events is shown.

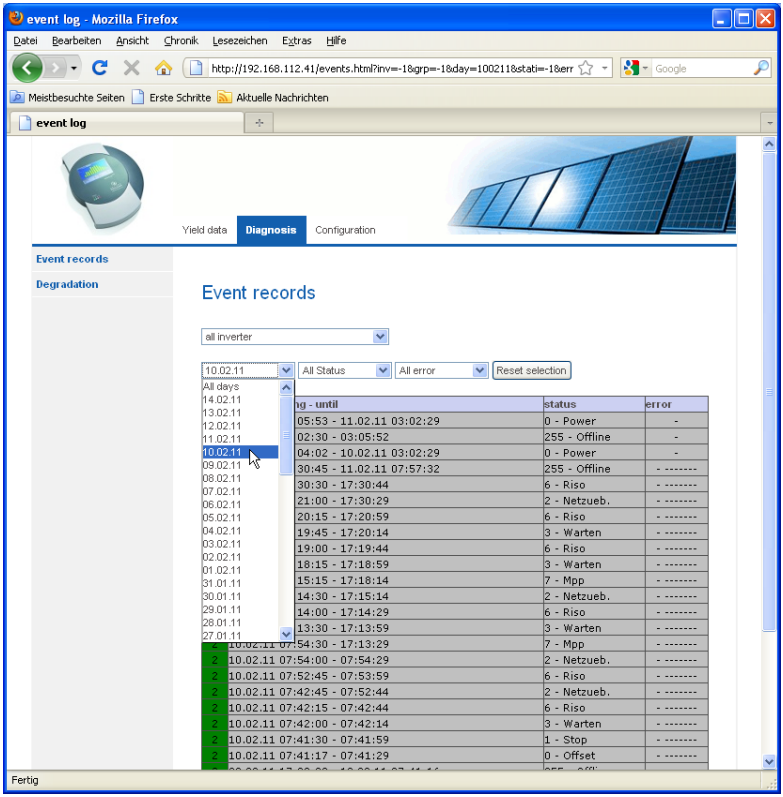

To display only certain events or events that occurred on a certain day in the previous 35 days, use the filter function.

1 Select the desired inverter in the **All inverters** drop-down menu.
   → Only the events for the selected inverter are shown.

2 Narrow down the selection by selecting the desired day in the **All days** drop-down menu.
   → Only the events for the selected day are shown.

3 Narrow down the selection further by selecting the desired status in the **All statuses** drop-down menu.
   → The only statuses available are those which occurred within the selected period of time.

4 Narrow down the type of error by selecting the desired error in the **All errors** drop-down menu.
→ Only those errors are shown which occurred within the selected period of time.

5 Click on **Reset selection** to cancel all of the filter settings.

2.5.2 Displaying the decrease in output for your plant

To obtain an overview of the total output for the previous years and the current performance, the device offers a tabular view.

1 Start the web browser and enter "solar-log" in the address line of the browser or select the bookmark in the browser's navigation bar.
→ The homepage is displayed.

2 Select **Diagnosis** in the main navigation menu.

3 Select **Degradation** in the left navigation bar.
→ Your plant's decrease in performance is shown.

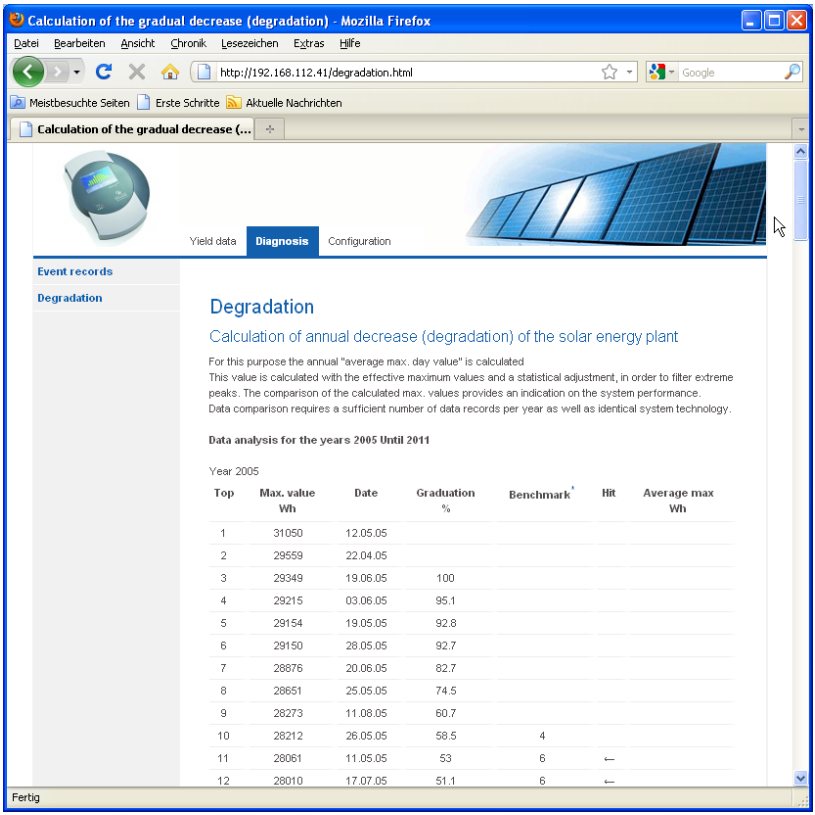
Calculation of the gradual decrease (degradation) - Mozilla Firefox
Datei Bearbeiten Ansicht Chronik Lesezeichen Extras Hilfe
http://192.168.112.41/degradation.html
Meistbesuchte Seiten Erste Schritte Aktuelle Nachrichten
Calculation of the gradual decrease (...
Yield data
Diagnosis
Configuration
Event records
Degradation
Degradation
Calculation of annual decrease (degradation) of the solar energy plant
For this purpose the annual "average max. day value" is calculated
This value is calculated with the effective maximum values and a statistical adjustment, in order to filter extreme peaks. The comparison of the calculated max. values provides an indication on the system performance.
Data comparison requires a sufficient number of data records per year as well as identical system technology.
Data analysis for the years 2005 Until 2011
Year 2005
Top | Max. value Wh | Date | Graduation % | Benchmark* | Hit | Average max Wh
1 | 31050 | 12.05.05
2 | 29559 | 22.04.05
3 | 29349 | 19.06.05 | 100
4 | 29215 | 03.06.05 | 95.1
5 | 29154 | 19.05.05 | 92.8
6 | 29150 | 28.05.05 | 92.7
7 | 28876 | 20.06.05 | 82.7
8 | 28651 | 25.05.05 | 74.5
9 | 28273 | 11.08.05 | 60.7
10 | 28212 | 26.05.05 | 58.5 | 4
11 | 28061 | 11.05.05 | 53 | 6 | ←
12 | 28010 | 17.07.05 | 51.1 | 6 | ←
Fertig

The performance of your modules decreases gradually over the years. Depending on the quality of the modules, this leads to a continuous reduction in the total yield of your plant, so-called "degradation".

To this end the "average maximum day value" is calculated for each year. It is calculated from the actual maximum values and a statistical adjustment to filter out extreme peaks. The comparison of these calculated maximum values allows conclusions to be drawn regarding the performance on the plant.

2.5.3 Pac Correction Factor

At photovoltaic plants, several measuring points and power generators (inverters) are combined with one another. The Solar-Log™ evaluates this data and partially looks for any correlations.

Since some of the components are not calibrated, deviations in the values measured can easily arise.

For example, if the total amount of energy produced based on what the inverters display is compared with the values from calibrated power meters, deviations of up to 8% can arise.

In practice, meters and inverters both can display too much or too little kWh.

To correct these inaccuracies in the medium term, the Solar-Log™ firmware uses a PAC correction factor.

Note

A calibrated power meter has a tolerance of +/- 1 % and an inverter has a tolerance of +/- 8 %.

From experience, if the the deviations are greater than 8-10%, there is a problem somewhere else and the measuring devices are not the source of this deviation.

2.5.4 Calculating the PAC correction factor

All of the yield data is saved internally without the correction factor. The correction factor is only applied to the data output. The factor can therefore be adjusted at any time.

The formula for calculating the correction factor is as follows:

$$\frac{\text{Yield Power Meter}}{\text{Yield Inverter}} * 1000$$

If the inverter does not have a display, it is advisable to use the values which are recorded by the Solar-Log™ from a period over a week.

That is why it is recommended to leave the default PAC correction factor at 1000 initially.

The correction factor can be adjusted yearly after receiving the statement from the utility company.

2.5.5 Example calculation

Inverter 1	Inverter 2	Calibrated power meter
Total energy	Total energy	Total energy
259.12 kWh	305.22 kWh	550.55 kWh
564.34 kWh		Deviation= 13.79 kWh

By comparing the values, you see that the inverters are more likely to display too much.

Pac Correction Factor	
Calibrated power meter total energy	Inverter total energy
550. 55 kWh	564.34 kWh
Calculated PAC correction factor in the example:	
$\frac{550.55kWh}{564.34KwH} = 975.66$	
Rounded PAC correction factor = 976	

2.6 Changing settings in the configuration menu

The configuration menu allows you to make changes and adjustments to the device software. The device should have been put into service and fully configured by your solar technician. However, you may like to make changes at a later date, such as changing your password or the network settings (because you want to use a new router, for example), etc.

- To make changes to the configuration please contact your solar technician.
- If you would like to make changes yourself, obtain the installation manual that is available for download from our internet site (↗page 125).

3 Operation using the touchscreen

The Solar-Log^{1000} has a touchscreen via which plant performance can be observed, problems diagnosed, logs viewed and USB data exchanges accomplished.

Note

Never touch the touchscreen with a sharp or pointed object!

This will damage the sensitive surface.

Note

To protect the display, the display switches itself off after a few minutes. You can set the length set in the configuration settings.

Take note of the information provided in our installation manual on the internet regarding the settings in the configuration menu.

3.1 Overview

3.1.1 Navigation overview

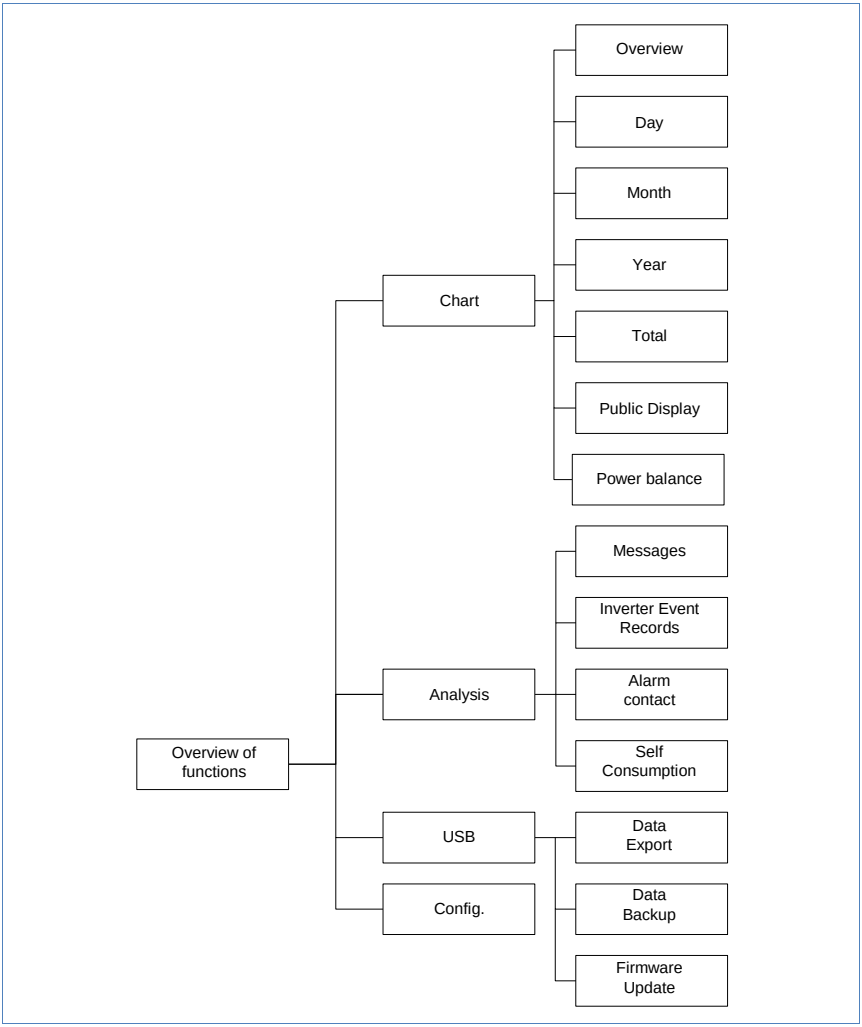

These changes were made to reflect the actual menu names in the Solar-Log – DELETE ME

3.1.2 How to navigate the touchscreen

- Tap the display with your finger.
  → The display shows the overview the first time you tap it.

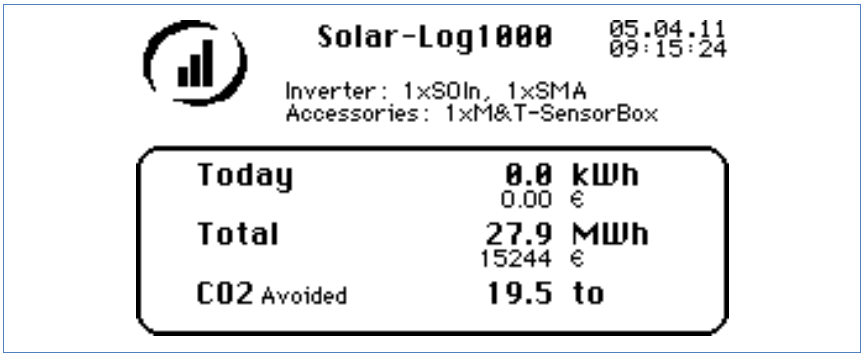

If the display for the Solar-Log^{1000} is tapped, it automatically shows the yield for the current day, the total yield for the plant and the calculated CO_2 savings.

- Tap the display again.
  → The main navigation menu is displayed.

Main navigation menu

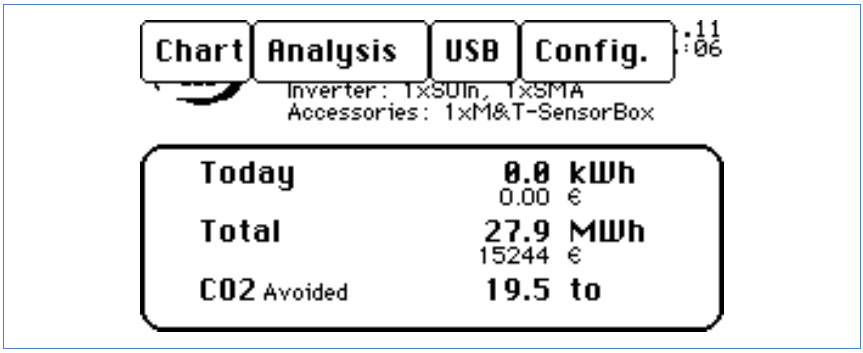

The main navigation menu displays four areas:

- **Chart**: Here you can call up the yield data. The content of this menu corresponds with the "Yield data" menu in the browser (↗page 10).

- **Analysis**: Here you can call up system messages, cancel alarm messages and adjust your own power consumption.
- **USB**: If your device is not connected to a local network, you can save the data on an inserted USB stick and restore it as well. You can extract data for viewing on your PC as well as update the firmware for the Solar-Log™.
- **Config**: The configuration menu allows you to make changes and adjustments to the device software (↗page 28).

3.2 Calling up yield data

1. Tap the display with your finger.
   → The main navigation menu is displayed.
2. Tap on **Chart**.
   → The various yield time periods are shown.
3. Tap on **Overview** to return to the overview of the current values.

3.2.1 How to navigate within the overviews

Symbol	Meaning
	Arrow keys: used to move to the previous or next period of time shown.
	The "Back" key closes the window that is currently open.

THIS BUTTON IS IN GERMAN – DELETE THIS BEFORE PRINT

3.2.2 What the values in the overviews mean

The values and their meaning can be found here in alphabetical order.

Description	Unit	Meaning
CO2	to	The calculated quantity of reduced carbon dioxide emissions
Eactual	kWh	The actual yield for the selected period of time
Eactual/Etarget	%	The actual value shows the percentage share between the actual yield and target yield for the selected period of time.
Emax	kWh	The maximum yield for the selected period of time
Emin	kWh	The minimum yield for the selected period of time
EMean	kWh	The average output for the selected period of time
Energy	kWh	The total daily output
Etarget	kWh	The device runs a forecasting statistics function that specifies a certain target value for each month. If the target value from the monthly yield is attained or exceeded the forecast output has been achieved.
Espec	Wh/Wp	The energy yield divided by the maximum output. This value is a good reference value with respect to other plants.
Pac	Watts	The current power input P on the AC voltage side
Pdc	Watts	The current power input P on the DC voltage side (solar generator). If only one single multi-string inverter is selected, the individual strings are shown separately.
Pmax	Watts	Maximum daily output

Description	Unit	Meaning
Eff	%	The current efficiency from the generator output and the power input. The manufacturer's specifications regarding the efficiency of the inverter can be checked here.

CHANGES MADE HERE TO REFLECT ACTUAL DEVICE FIRMWARE – DELETE THIS COMMENT BEFORE PRINTING

3.2.3 Daily chart

1 Tap the display with your finger.
→ The main navigation menu is displayed.

2 Tap on **Chart** and tap on **Day**.

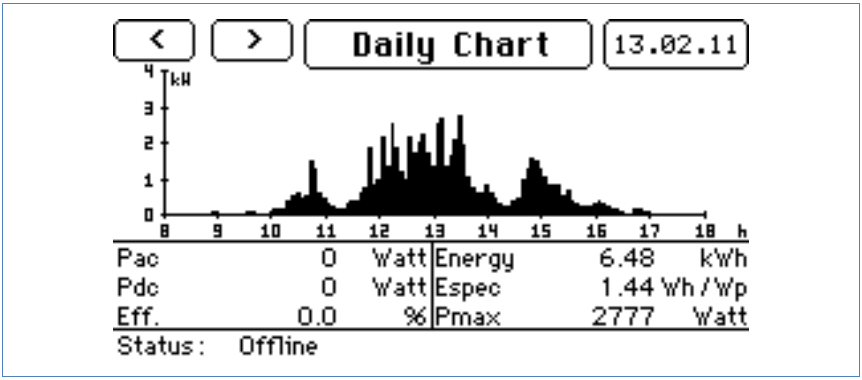

The day chart shows you the current values for the selected day.

3 Tap on the date to show the display for the desired day.

4 Tap on **Day chart** to show the yield values for the connected inverters.
→ The menu window settings are shown.

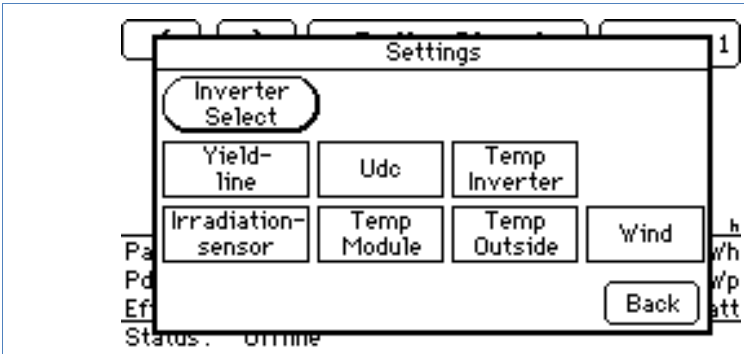

5 Tap on **Inverter selection** to select the desired inverter.
→ The total plant menu window is shown.

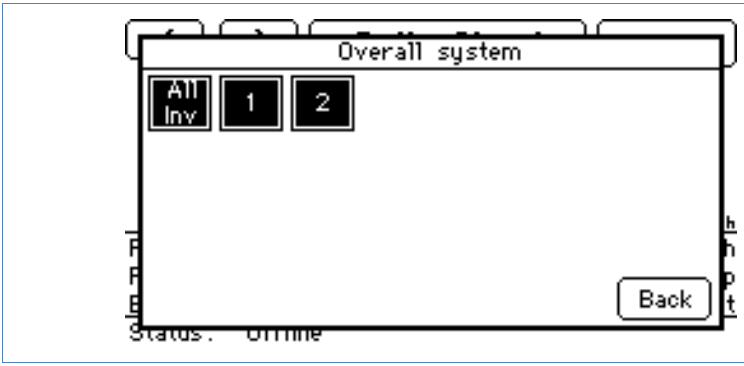

6 Select the desired inverter and tap on **Back**.
→ The values for the selected inverter are shown.

7 Tap on **Day chart** to show the display for additional measured values.

8 Select the desired display and tap on **Back**.
→ The selected setting is shown.
→ If you have selected **Yield line** the target value is also shown.

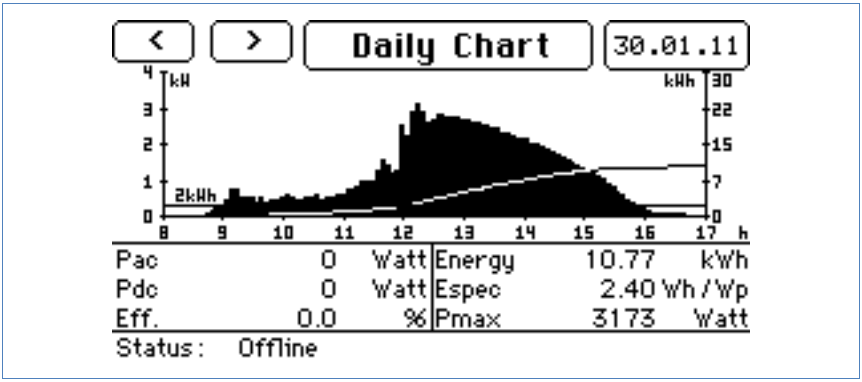

9 Tap on the display to call up the main navigation menu.

3.2.4 Month chart

1 Tap the display with your finger.
→ The main navigation menu is displayed.

2 Tap on **Chart** and tap on **Month**.

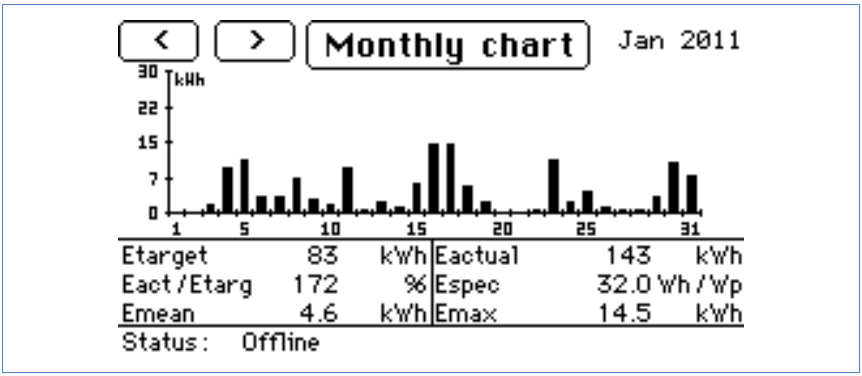

The month chart shows you the current values for the selected month.

3 Tap on any bar displayed to show the day chart for the selected day (↗page 34).

4 Tap on **Monthly chart** to show the yield values for the connected inverters.

→ The total plant menu window is shown.

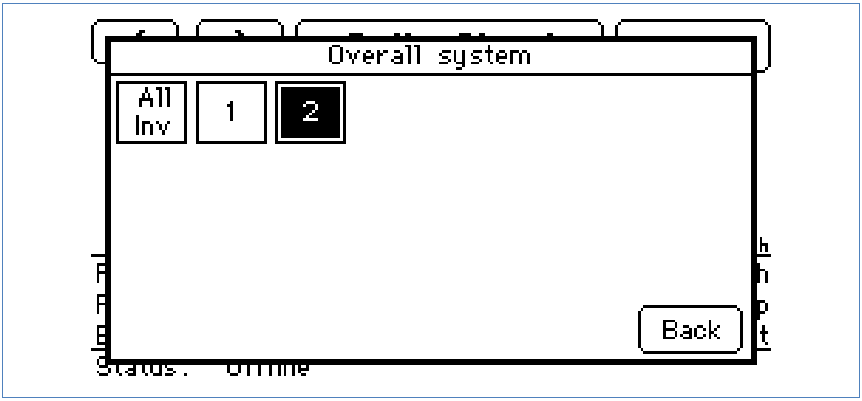

5 Select the desired inverter and tap on **Back**.
→ The values for the selected inverter are shown.

6 Tap on the display to call up the main navigation menu.

3.2.5 Year chart

1 Tap the display with your finger.
→ The main navigation menu is displayed.

2 Tap on **Chart** and tap on **Year**.

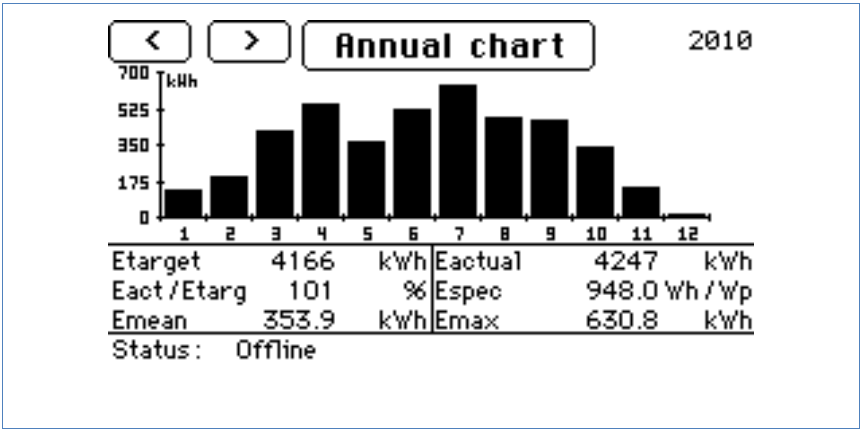

The year chart shows you the current values for the selected year.

3 Tap on any bar displayed to show the month chart for the selected month (↗page 36).

4 Tap on **Yearly chart** to show the yield values for the connected inverters.

→ The total plant menu window is shown.

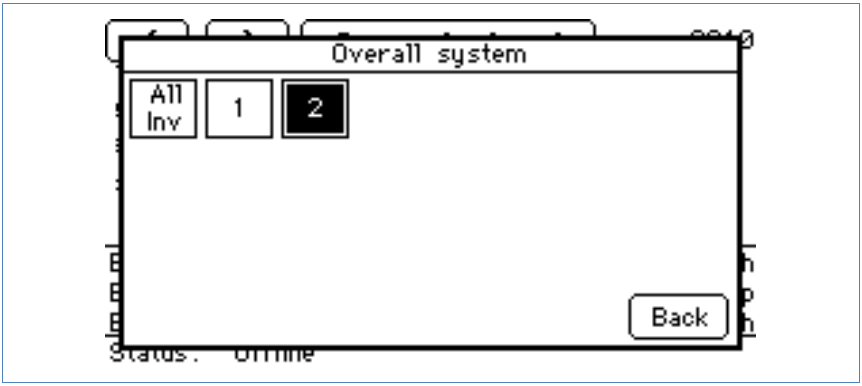

5 Select the desired inverter and tap on **Back**.

→ The values for the selected inverter are shown.

6 Tap on the display to call up the main navigation menu.

3.2.6 Total chart

1 Tap the display with your finger.
→ The main navigation menu is displayed.

2 Tap on **Chart** and tap on **Total**.

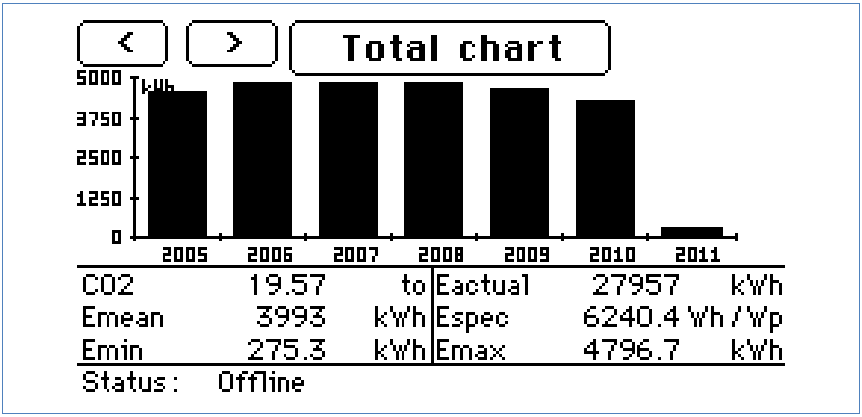

The total chart shows you the values for the plant for the entire period of operation.

3 Tap on any bar displayed to show the year chart for the selected year (↗page 37).

4 Tap on **Total chart** to show the yield values for the connected inverters.
→ The total plant menu window is shown.

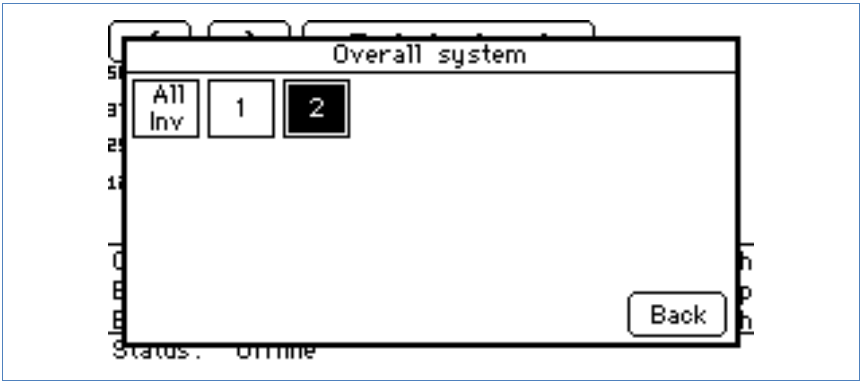

5 Select the desired inverter and tap on **Back**.
→ The values for the selected inverter are shown.

6 Tap on the display to call up the main navigation menu.

3.2.7 Large display

1 Tap the display with your finger.
→ The main navigation menu is displayed.

2 Tap on **chart** and tap on **Large display**.
→ The large view for the current yield values is displayed.

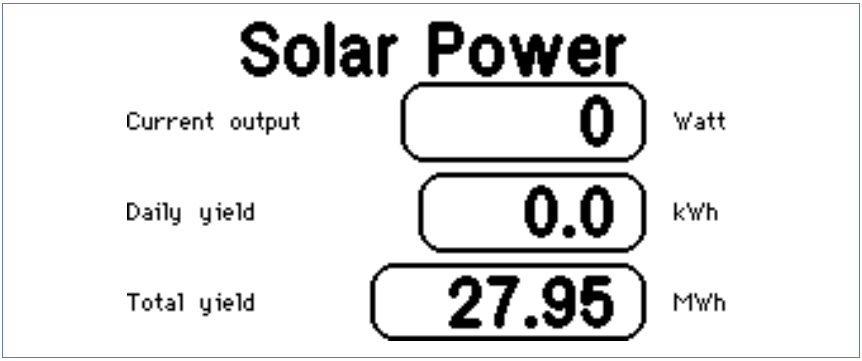

The large display shows you the current output of your plant.

3 Tap on the display to call up the main navigation menu.

3.2.8 Power balance

If a meter is set as a "consumption meter" type for the Solar-Log^{1000}, an additional "Power balance" menu is shown on the touchscreen.

1 Tap the display with your finger.
→ The main navigation menu is displayed.

2 Tap on **Chart** and tap on **Power balance**.
→ The large view for the current power balance is displayed.

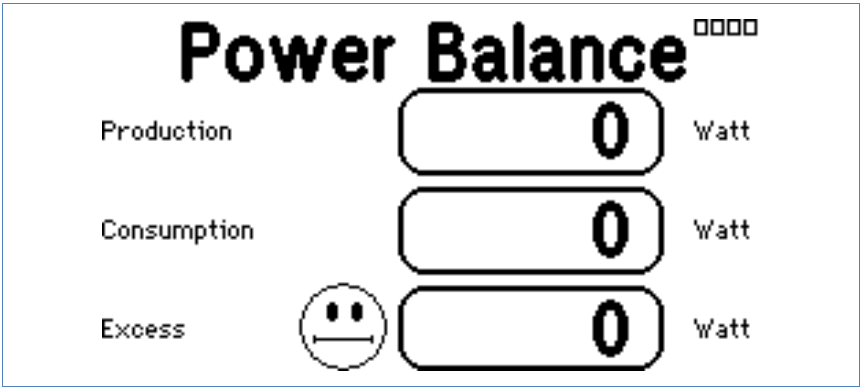

The power balance shows you the current yield, your own current consumption and the difference between the two values.

If you are taking more from the grid than you are supplying, the specified surplus is shown as a negative figure and the smiley symbol shows a sad face.

3 Tap on the display to call up the main navigation menu.

3.3 Calling up the analysis function

With the analysis function you are accessing the device's event log. You can display a total overview of all of the errors, malfunctions and status changes that have occurred for the connected inverters.

3.3.1 Calling up messages

1 Tap the display.
→ The main navigation menu is displayed.

2 Tap on **Analysis** and **Messages**.
→ The display shows a list of messages.

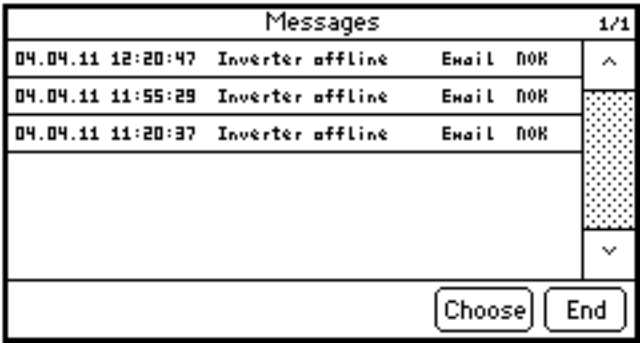

3 Select the desired message from the list.
→ The content of the selected message is shown.

4 Tap on **Next** to show the next message or to return to the list of messages.

5 Close the list of messages by tapping on **End**.

3.3.2 Showing inverter events

1 Tap the display.
→ The main navigation menu is displayed.

2 Tap on **Analysis** and **Inverter event records**.
→ The display shows a list of event logs for the connected inverters.

3 Select the desired inverter from the list.
→ The event log for the selected inverter is shown.

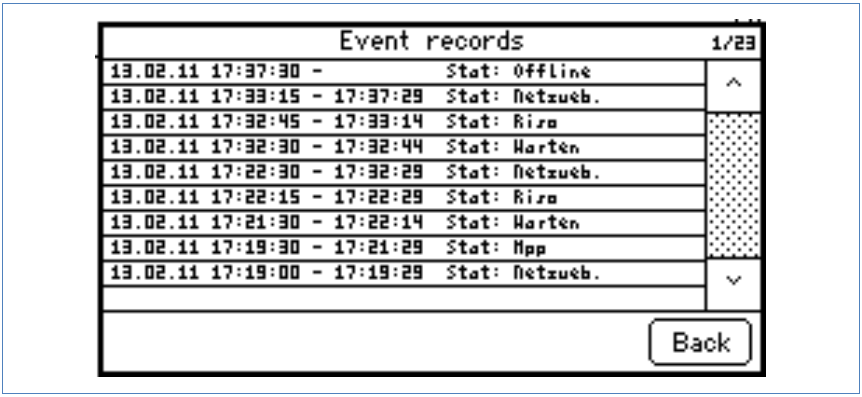

4 Tap on **Back**.
→ The list of event logs is shown.

5 Tap on **Menu**.
→ The main navigation menu is displayed.

3.3.3 Processing the alarm messages

In this menu you can cancel the fault reports.

1 Tap the display.
→ The main navigation menu is displayed.

2 Tap on **Analysis** and **Alarm contact**.
→ The display shows the status of the alarm monitoring function.

3 Tap on **Acknowledge alarm manually**.
→ The alarm message is cancelled.

4 After the malfunction has been remedied, tap on **Reset alarm**.
→ The device returns to the operating mode.

5 Tap on **Menu**.
→ The main navigation menu is displayed.

3.3.4 Optimising your own power consumption

To transfer your own power consumption to times during which sufficient production of power is taking place, the Solar-Log^{1000} offers the option to switch on up to 4 consumers automatically and switch them off again if required. These consumers are shown as "switches" on the display.

The appliances are controlled based on current power surpluses, i.e. "production minus consumption". If no consumption meter has been connected, control can only take place in connection with simple production of power.

Note
To set the switches, follow the installation manual or contact your solar technician.

Setting internal switches

The following description for setting a switch applies to all four switches.

Note

If there is only one external switch set on the Solar-Log™, the power surplus is always used for the automatic switching function . If there are several switches, the surplus is not used; instead only the simple power production is used as the power consumption of the consumers is generally not constant during the switching time period (e.g. washing machine) and changes continually. If there are several such consumers the calculated power surplus would therefore continually fluctuate, making optimal control impossible.

1 Tap the display.
→ The main navigation menu is displayed.

2 Tap on **Analysis** and **Self Consumption**.
→ The display shows the first switch.

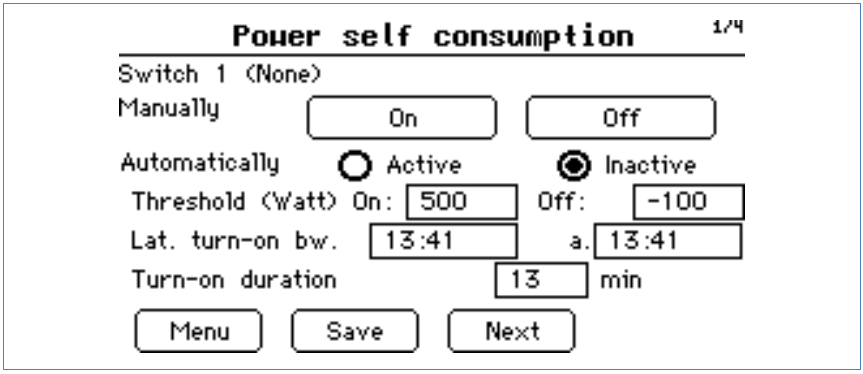

The setting options are shown for each switch:

- **Manually** and **Automatically**. You can switch the switches on or off manually or define an automatic switching procedure.

- **Threshold**. The threshold values "On" and "Off" define the switch on and switch off value depending on the current power surplus. If an appliance is supposed to run permanently after switching on (e.g. a washing machine), the "Off" threshold value must be set to "-9999". The appliance is always switched off as soon as the switch off time is reached (see below).
- **Latest switch on**. With the "latest switch on" function, a period of time can be defined in which the appliance definitely switches on, even if the "On" threshold value has not been attained (example: The wash cycle should definitely be finished by evening and therefore must start in time for this to happen). The exact switch on point is redefined daily within the selected period of time via a random generator so that the network load due to consumers switching on at the same time is avoided.
- **Turn-on duration**. To prevent switches from being triggered immediately when there is sunlight for only a short period, you can specify a minimum length of time after which the appliance switches on.

3 Tap the value to be set.
→ The virtual keypad is shown.

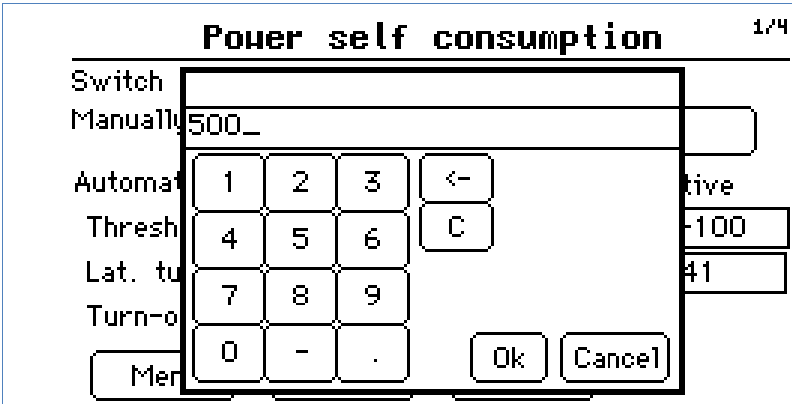

4 Enter the desired values and confirm the entry by pressing **OK** or **Cancel** to abort the entry.

5 To abort, press **Menu**.
→ The main navigation menu is displayed.
→ The changes are rejected.

6 After making the changes press **Save** to save the settings for this switch.

7 Tap on **Next** to select the next switch.

3.4 Using data transfer via USB

If your Solar-Log^{1000} is not connected to a local network you can also save and import data such as event logs or settings, using a USB stick.

The Solar-Log^{1000} has a USB interface on the top side of the housing under the cover. You also require a USB stick with has been formatted with the Windows operating system and which has a maximum of 4 GB memory.

- Pull the cover frontwards to remove it from the top side of the housing and insert the USB stick into the USB port.

3.4.1 Saving current data on the USB stick (copying data)

You can save the current yield values on the USB stick in order to show it on the PC using an internet browser. The data is saved as a website. You can observe the values on your computer using a browser.

1 Tap the display.
→ The main navigation menu is displayed.

2 Tap on **USB** and **Data Export**.
→ The display shows the usage of the USB stick.

Data export to USB stick
All data will be copied onto an USB stick-
in homepage format.
(Day curves for 35 days maximum)
The file 'index.htm' can be opened in the
main menu of the PC with
a web browser.
Export data
Cancel

3 Tap on **Export data**.
→ The current data for the Solar-Log[1000] is copied on the USB stick.

4 Tap on **Cancel** if you do not wish to transfer data.
→ The main navigation menu is displayed.

Displaying data on the computer

1 After the data has been successfully transferred, remove the USB stick from the Solar-Log[1000] and insert it into the USB port of your computer.

2 Using the browser, open the file "index.html" in the source directory of the USB stick.

3.4.2 Performing data back-up

You can also use the USB stick to perform a data back-up. You can select whether you want to

- save the yield and settings data or
- copy onto the device yield data which has already been saved on the USB stick or
- copy onto the device settings which have already been saved on the USB stick.

Caution

When importing the data from the USB stick all of the data on the device is deleted and replaced.

1 Tap the display.

→ The main navigation menu is displayed.

2 Tap on **USB** and **Data backup**.

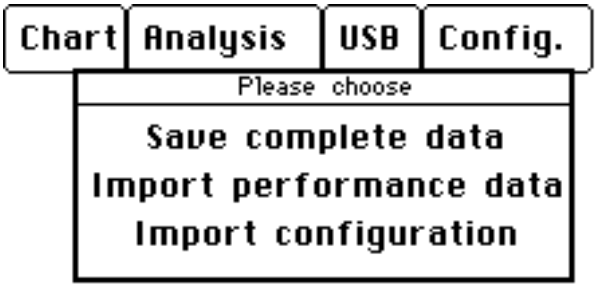

3 Select the desired option.

Performing complete data back-up

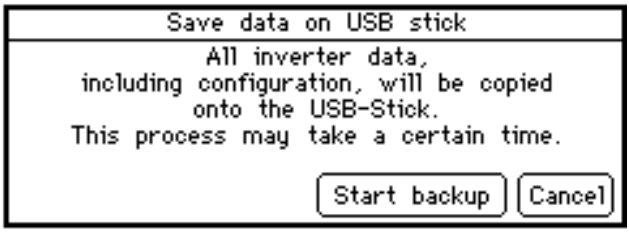

1 Tap on **Start backup**.
→ The current data for the Solar-Log^{1000} is copied on the USB stick. Depending on the quantity of the data, the transfer can take several minutes.

2 Tap on **Cancel** if you do not wish to back-up data.
→ The main navigation menu is displayed.

Importing the configuration

1 Tap on **Import configuration**.

2 Tap on **Search backup**.

→ The device searches for the back-up directory on the USB stick and copies the data. Depending on the quantity of the data, the transfer can take several minutes.

3 Tap on **Cancel** if you do not wish to transfer the configuration settings.
→ The main navigation menu is displayed.

Import yield data

Information
Before importing the saved yield data you should import the current configuration (↗page 51).

1 Tap on **Import performance data**.

2 Tap on **Search backup**.
→ The device searches for the back-up directory on the USB stick and copies the data. Depending on the quantity of the data, the transfer can take several minutes.

3 Tap on **Cancel** if you do not wish to transfer the yield data.
→ The main navigation menu is displayed.

3.4.3 Updating the firmware

The firmware for the Solar-Log™ can be updated via the USB port.

1 Use the web browser of your PC to navigate to our download site and download the updated firmware onto the hard disk of the PC. The firmware can be found at the following web address:

http://www.solar-log.com/en/service-support/downloads/firmware.html

2 Select the Solar-Log^{1000} and copy the firmware onto the USB stick.

3 Insert the USB stick into the Solar-Log^{1000}.

4 Tap on **USB** in the main navigation menu.

5 Tap on **Firmware update**.

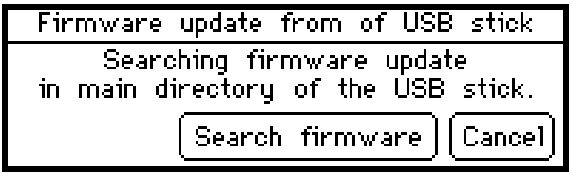

6 Tap on **Search Firmware**.

7 The updated firmware is found on the USB stick and imported.

8 Tap on **Cancel** if you do not wish for the update to take place.
→ The main navigation menu is displayed.

3.5 Changing settings in the configuration menu

The configuration menu allows you to make changes and adjustments to the device software The device should have been put into service and fully configured by your solar technician. However, you may like to make changes at a later date, such as changing your password, the network settings (because you want to use a new router, for example) etc.

- To make changes to the configuration please contact your solar technician.
- If you would like to make changes yourself, obtain the installation manual that is available for download from our internet site (↗page 125).

4 E-mail Notification

4.1 Yield E-mail

The Solar-Log™ comes with an e-mail program that can send a daily overview of the day's performance to two different e-mail addresses (maximum of 57 characters, separated with a semicolon).

Open the dialog box

Select e-mail from the Configuration // Advance menu.

→ The following dialog box appears on the right.

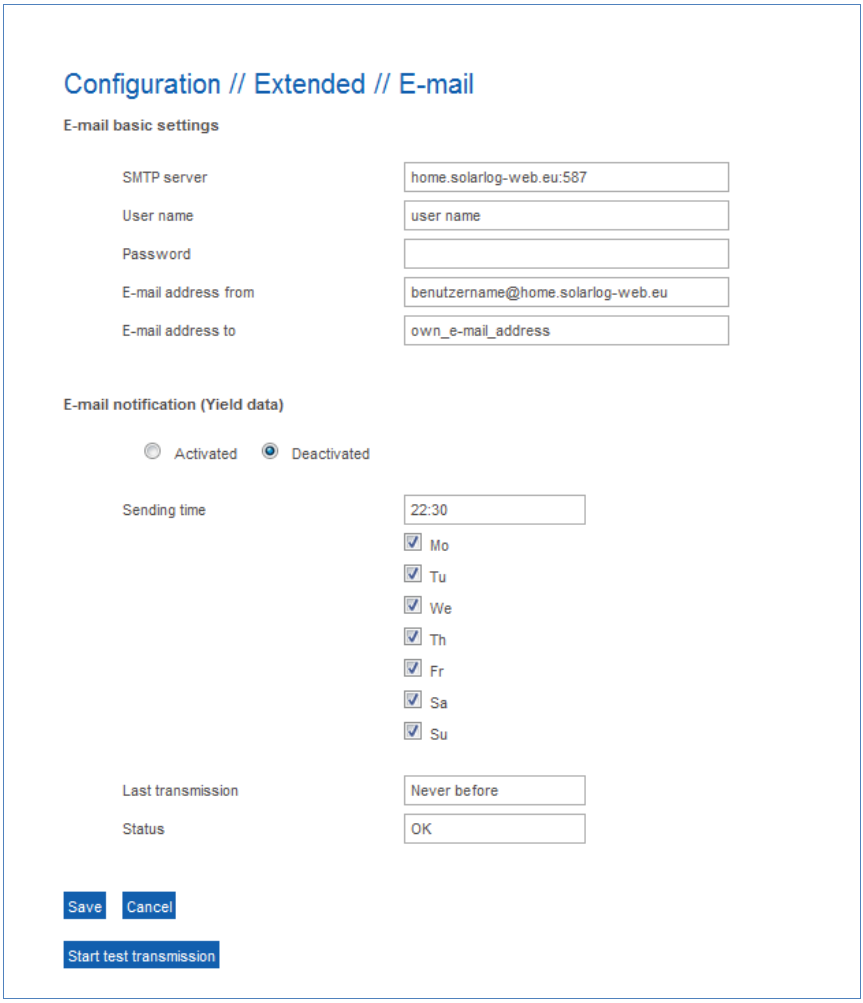

The basic e-mail settings as well as the *E-mail Notification* are configured here. (See the chapter Configuring E-mail Notifications in the Installation Manual(*Advanced/E-mail)*)

Sent Yield E-mail

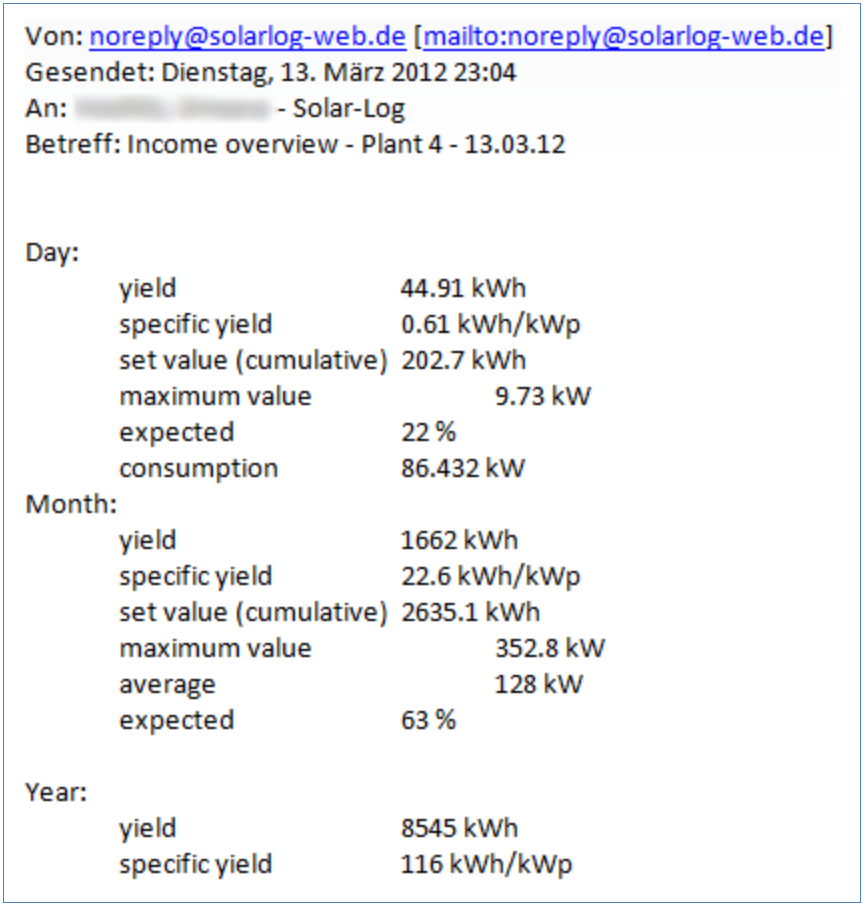

Von: noreply@solarlog-web.de [mailto:noreply@solarlog-web.de]
Gesendet: Dienstag, 13. März 2012 23:04
An: [redacted] - Solar-Log
Betreff: Income overview - Plant 4 - 13.03.12

Day:

yield	44.91 kWh
specific yield	0.61 kWh/kWp
set value (cumulative)	202.7 kWh
maximum value	9.73 kW
expected	22 %
consumption	86.432 kW

Month:

yield	1662 kWh
specific yield	22.6 kWh/kWp
set value (cumulative)	2635.1 kWh
maximum value	352.8 kW
average	128 kW
expected	63 %

Year:

yield	8545 kWh
specific yield	116 kWh/kWp

Screenshot of a yield message

Explanation of the message:

Subject: The Solar-Log serial number and time and date

Day

Field	Explanation Text
Sum	The actual amount of energy fed into the grid for the day in kWh.
Specific	Yield specific. The energy yield divided by the amount of generator power installed. (Values are normalized to 1 kWp.)
Max.	The maximum power in Kw
Target Yield	The yield in kWh which can be achieved according to the forecast.
Actual Yield	Percentage of days on which the target was achieved. The daily yield achieved in percent. The total to target ratio.

Month

Field	Explanation Text
Sum	The actual amount of energy fed into the grid for the month in kWh.
Specific	Yield specific. The energy yield divided by the amount of generator power installed. . (Values are normalized to 1

Field	Explanation Text
	kWp.)
Max.	Displays the maximum daily production for this month in kWh.
Medium	The average daily production which was achieved for this month.
Target Yield	The yield in kWh which had been achieved up to the current day according to the forecast.
Actual Yield	Percentage of the monthly target that has already been achieved up to the current day. The month target already achieved as a percentage. The total to target ratio.

Year

Field	Explanation Text
Sum	The actual amount of energy fed into the grid for the year. In kWh
Specific	Yield specific. The energy yield divided by the amount of generator power installed. (Values are normalized to 1 kWp.)

4.2 Performance Monitoring

To monitor different sized inverters, the Solar-Log™ scales down**** the value from every inverter to 1 kWp. The Solar-Log™ uses the amount of generator power set in Configuration // Basic // Inverter.

The generator power is equivalent to 100% and the value here is normalized to 1 kWp)

Example plant:

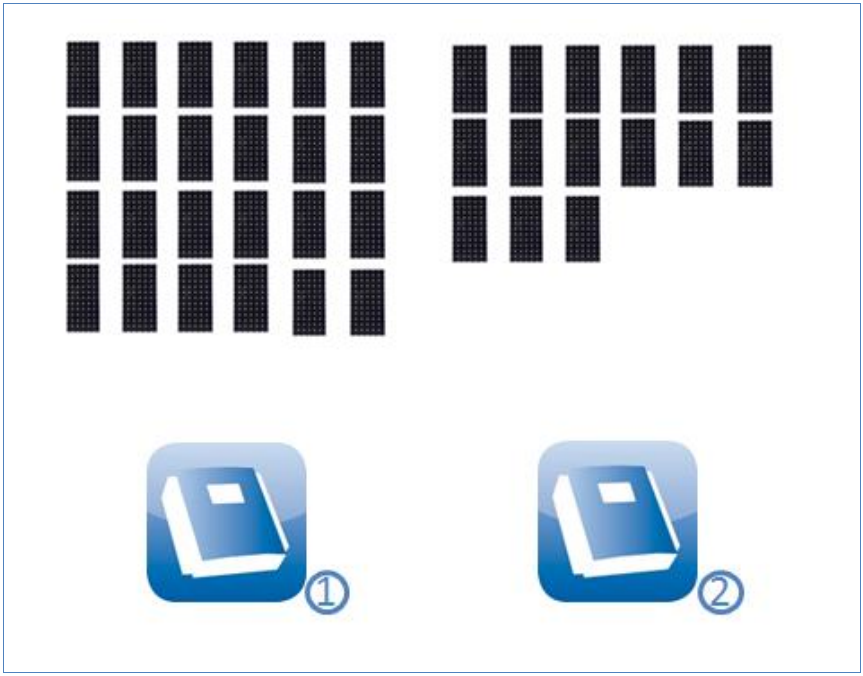

Inverter 1, Inverter 1 house	Inverter 2, Inverter 2 house
Generator Power: 25* 220W (Modules) = 5500 Wp	Generator Power: 15* 220W (Modules) = 3300 Wp
Module Field 1	Module Field 1

The Solar-Log™ compares all of the inverters that are located in the same module field.
Performance Monitoring Configuration under Configuration // Basic // Inverter.

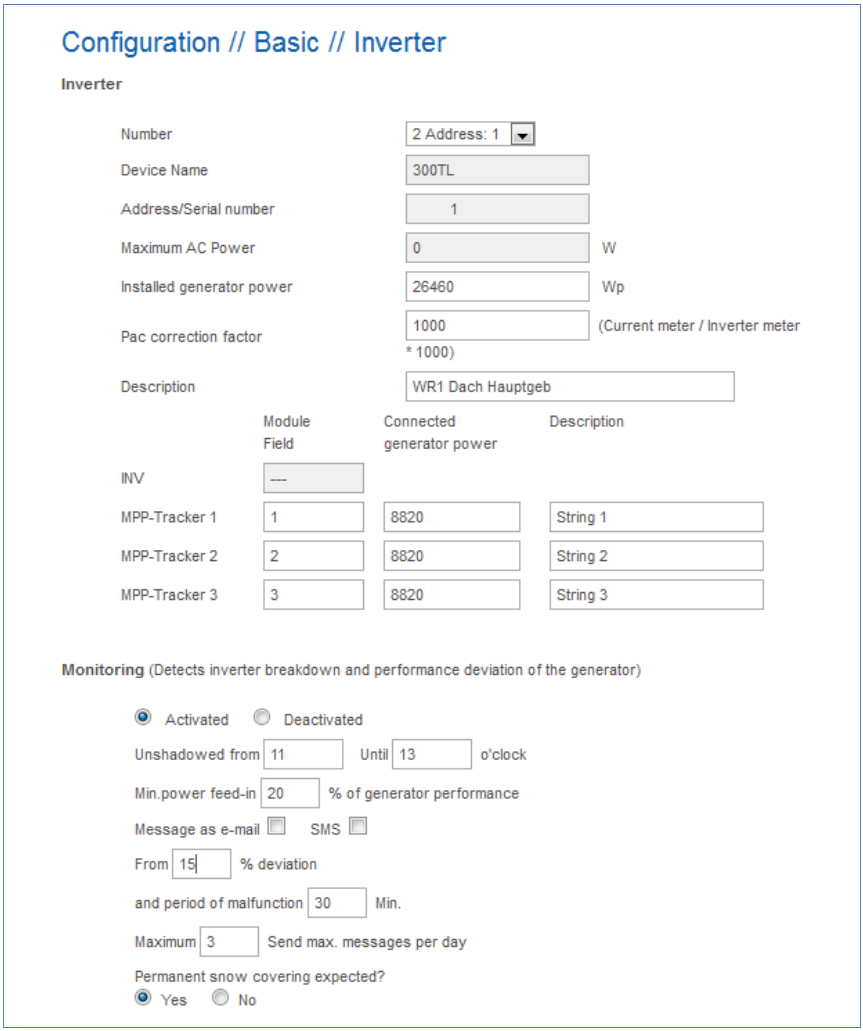

The output measured from the inverters is contrasted with the generator capacity that is listed in the system.
The notification is sent when the deviation exceeds the amount configured (for example 15%) over set time period (for example 30 minutes).

Performance Monitoring Notification

Example Notification:

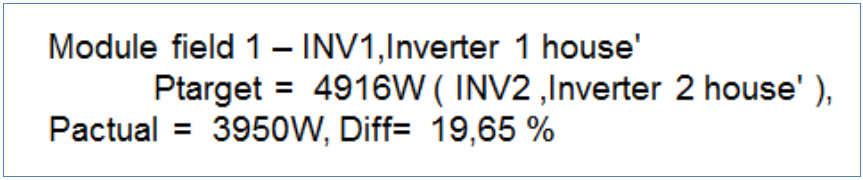

The notification contains the following information:

Module field: The module field which was affected or at least the module field in which a deviation was detected.

Inverter with a deviation: "Inverter 1"

IRV:*** The reference value that is used to contrast inverters. It comes from the most effective operating inverter, the value is in W.

IAV***: The amount of output from inverter with a deviation.

Dev: The amount of deviation as a percentage of the reference value.

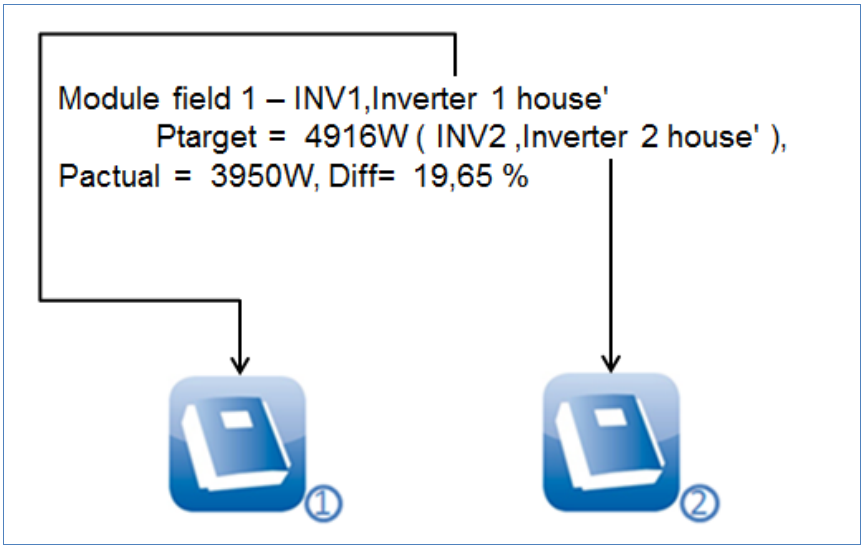

	Inverter 1 Inverter 1 house	Inverter 2 Inverter 2 house
Generator Power:=	5500 Wp	3300 Wp
Current production	= 3950 W	= 2950 W
Current efficiency	= 71.81 %	= 89.39 %
	Inverter with a difference	Reference Inverter

Inverter has generated the most power with its value of 0.8939 and is thus used as the reference inverter.

Calculation and Explanation of the Notification

In regard to the reference inverter, inverter 1 is compared to all of the inverters in the same module field (in the example only output is used). A deviation of 19.65 is determined based on the comparison of the gen-

erator capacity and IRV forecast.

Calculating the Deviation for Inverter 1

Deviation Calculation	
Inverter 1 IRV calculation	(5500*89.39): 100= IRV 4916 W
Efficiency of Inverter 1	(3950 W: 5500 W)* 100= 71.81 %
corresponds to 71.81 % of the generator power or a value of 0.7181 kWp.	
Deviation as a percentage	
IRV Inverter 1 - IAV Inverter 1	4916 W – 3950 W= 966 W
Deviation as a percentage	(966 W: 4916 W)* 100= 19.65 %

Inverter 2 is used as the reference inverter since it was the most effective one at the time of the measurement. Inverter 1 should have produced an output of 4916 W based on the measurement and the calculations comparing all of the inverters in the same module field. The actual output was 3950 W, a deviation of 19.65%. This caused a notification to be sent.

5 Using Solar-Log WEB

You can also use Solar-Log™ WEB to call up the yield data and event logs for your plant via the internet, as well as set up a daily email containing the yield and fault reports to be sent out to an email address. To do this you need a Solar-Log™ WEB account.

In addition to this option we also offer further levels of expansion with a corresponding range of service to fulfil every requirement. For further information, contact your solar technician directly or visit the following address

http://www.solar-log.com/en/products-solutions/solar-log-web.html

5.1 Register with Solar-Log™ WEB "Classic 2nd Edition"

Registration for the Solar-Log™ WEB "Classic 2nd Edition" takes place quickly and simply online.

Information

It is important to note that the following addresses are for the German “Classic 2nd Edition”. To determine which address to visit for your country ask your installer or visit

http://www.solar-log.com/?L=1 for more information

1 Open the browser and navigate to the Solar-Log™ WEB registration page under

http://www.solar-log.com/classic2/

Select **Registration** in the left navigation bar.

→ The registration form is shown.

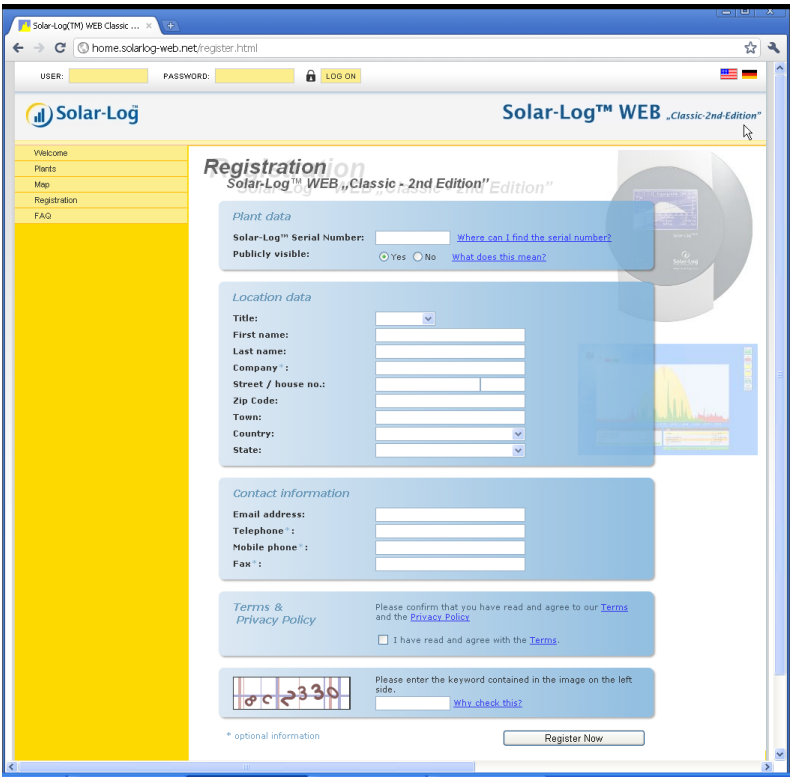

2 Enter the **Serial number** of your device.

→ The serial number (SN) can be found under the top cover (↗page 124).

3 Select whether you would like the data to be **Publicly visible** to the internet.

→ Your plant information is then able to be viewed by other visitors to the site. If you select "No", you must log in using the user data that you receive from Solare Datensysteme GmbH in the course of the registration process (↗page 68).

→ The "publicly visible" setting can be changed at any time afterwards on your website in the "Configuration" area.

4 Enter your **Location data** and your **Contact information**.

5 Confirm acceptance of the General Terms and Conditions (**AGB**) and the **Privacy Policy** after you have read them.

6 Enter the **Code word** shown in the chart in order to ensure that no automated programs (Bots) are performing the registration which could then paralyze the server.

7 Confirm your entries by pressing **Register now**.

→ If you have not entered a code word or have entered the code word incorrectly, a new code word is automatically displayed and you do not need to re-enter your data.

On successful completion of your registration you will receive an email sent to your designated email address which you must confirm. After your data has been manually checked your access will be granted.

Note

The activation takes place during normal business hours and can take up to 24 hours.

5.2 Calling up plant data

- In the browser, open the homepage for Solar-Log™ WEB or enter the URL you recived in the registration mail:
  → The homepage is displayed.

Solar-Log(TM) WEB Classic ...
home.solarlog-web.net/welcome.html
USER:
PASSWORD:
LOG ON
Solar-Log
Solar-Log™ WEB „Classic-2nd-Edition"
Welcome
Plants
Map
Registration
FAQ
Solar-Log™ WEB
The perfect Solar-monitoring-platform - easy, secure, powerful.
Solar-Log™ WEB "Classic 2nd Edition"
Solar-Log™ WEB "Classic 2nd Edition" is the perfect solution for technically adept operators of Photovoltaic plants with less than 30 kWp, offering all basic functions to monitor the plant via the Internet; including event logs or daily email delivery of yield information and error messages to any email address, free of charge.
Registering for Solar-Log™ WEB "Classic 2nd Edition" can be done online with minimal effort.
In addition to this, we also offer incremental service packages with added benefits according to your monitoring needs. You can find further information here.
SERVICE HOTLINE
Telephone: 203-702-7189
email: support@solar-log.com
Solare Datensysteme GmbH | D-72351 Geislingen-Binsdorf © 2010 | Solar-Log™ WEB Version: 1.1.12

Logging in to Solar-Log™ WEB

If you have refused "visibility to all" when registering, you must log in to the Solar-Log™ WEB internet site. If your plant is visible to all, you can skip the log in.

- In the header enter your **User** and **Password** information and click on **Log On**.

Calling up the plant overview

All of the plants are shown in the overview. The plants are anonymous. You can directly display the plants that are visible to all under the day chart.

Plant data that has been given a password can only be called up by registering.

- Select **Plants** on the left navigation menu

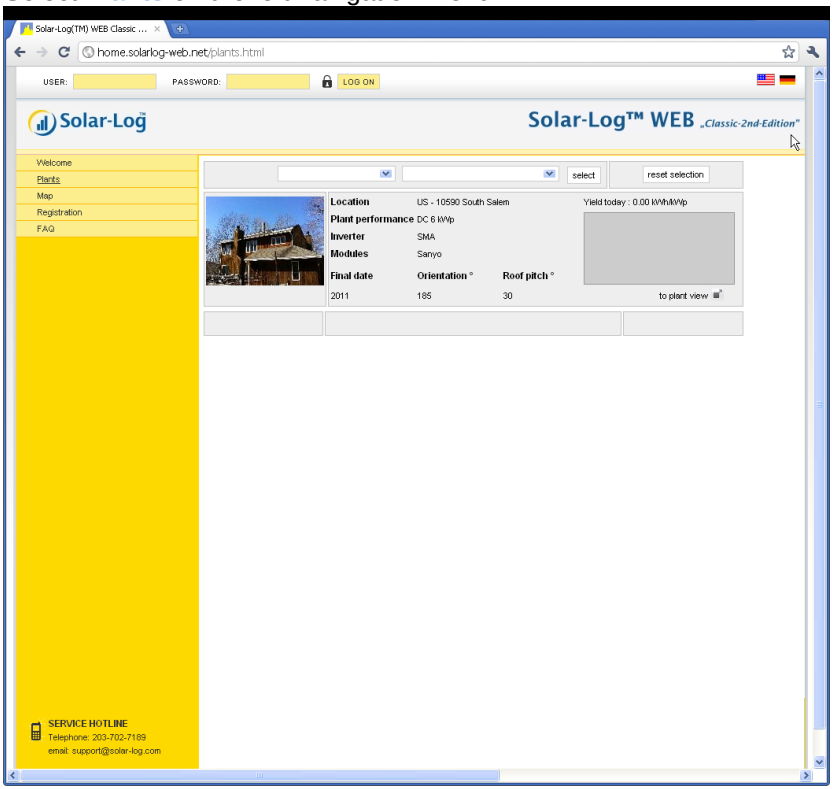

1 Select the **Zip Code** of your location, **Inverter** manufacturer, **Final Date** of installation or the manufacturer of the **Modules** in your plant.

2 Click on **Select** to filter the list according to the criteria selected or click on **Reset selection** to cancel the selection criteria.
→ A list of plants is shown that correspond with the filter criteria.

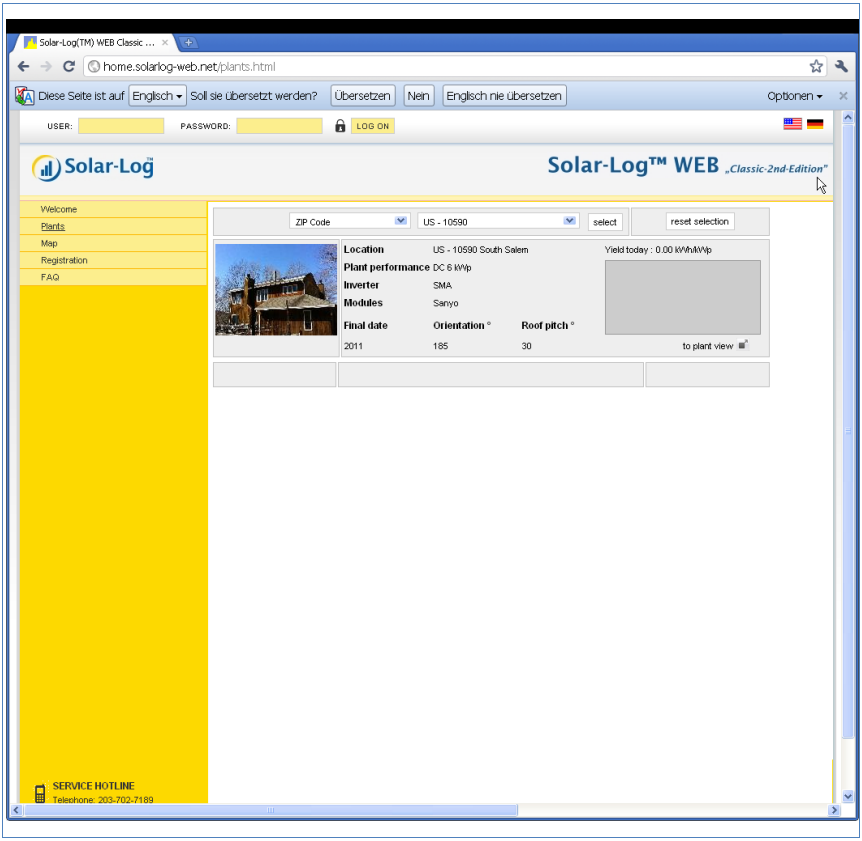

The overview shows the installed inverters, their output, module manufacturer, year of manufacture, orientation and the roof slope of the plants. If no picture of the plant has been made visible to all, a standard image is shown.

In addition, in the right column you can find an overview of the plants' current yield.

3 Click on **to plant view** below the yield diagram.
→ The detailed overview of the plant is shown.

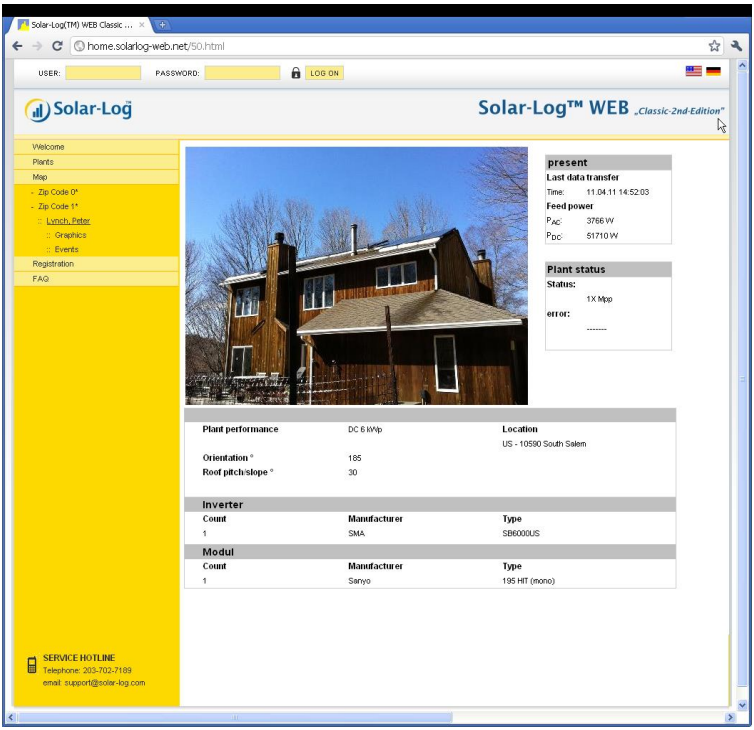

The detailed overview shows additional technical details about the plant as well as the plant status including any error messages that have occurred.

4 To navigate directly to the plant details, place a bookmark in your browser.

5.3 Calling up yield data

5.3.1 How to navigate within the overviews

The navigation on the internet site for the overviews is similar to the navigation on the overview pages in your local network (page 10).

Switching between the overviews

1 Move the cursor onto the small triangle on the left next to the display for the period of time.
→ An overview of the time periods is shown.

2 Click on the desired time period.
→ The overview of the time period is shown.

5.3.2 What the values in the overviews mean

The values provided below the diagrams are similar to the values on the overview pages in your local network (page 11).

Any information regarding revenue is not shown on the internet site for reasons related to privacy.

5.3.3 Day overview

1 Open the browser and click on the bookmark for your plant.
→ You may have to log in (page 68).

→ The detailed overview of your plant is shown.

2 Select **Graphics** in the left navigation bar.

→ The day overview of the plant is shown.

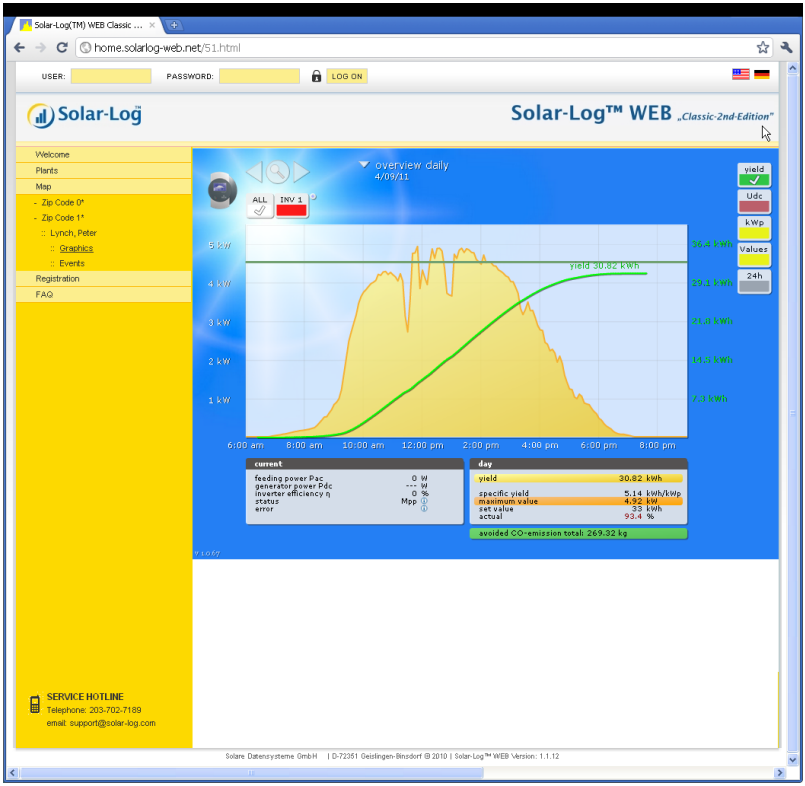

The daily yields are shown in a curve chart. The dark green line shows the target value for the day.

Move the cursor over the curves to display the corresponding values.

Buttons for the day overview

- **Yield**: Yield line via which the yield trend can take place. In addition, a dark green line is displayed as the total daily target.

- **Udc**: Generator voltage. To display voltage of the individual strings only one inverter may be selected.
- **kWp**: Converting the scaling from "Output in watts" to "Output in kWh/kWp". This makes all of the curves comparable in terms of their specific output. This also makes it easier to identify decreased outputs from specific inverters/strings.
- **24h**: Display showing the output over 24 hours of the day for a complete visualisation of the power consumption over the course of one day

Additional functions using S0 meter reader

The following displays are also available to you by connecting an S0 meter reader to the Solar-Log™:

- **S0**: Shows the power consumption for your building as a graph in watts.
- **Cons**.: Shows the power consumption for your building as a rising line in kWh.
- **Values**: Shows various values for your inverter in text form.
- **Balance**: Shows you the ratio of your power consumption to your power yield. In the lower left text field the ratio is also shown as a percentage.

Additional functions with the sensor box

- **Solar**: Shows the reference value of an irridation sensor. The daily output of the plant must be within the measuring range of the sensor.
- **Mod T**: Shows the module temperature. The temperature is detected by the sensor box.

3 Click on one of the buttons and then on the magnifying glass symbol.
→ The selected curve is shown.

5.3.4 Month overview

▸ Select **Overview Monthly** in the navigation menu.

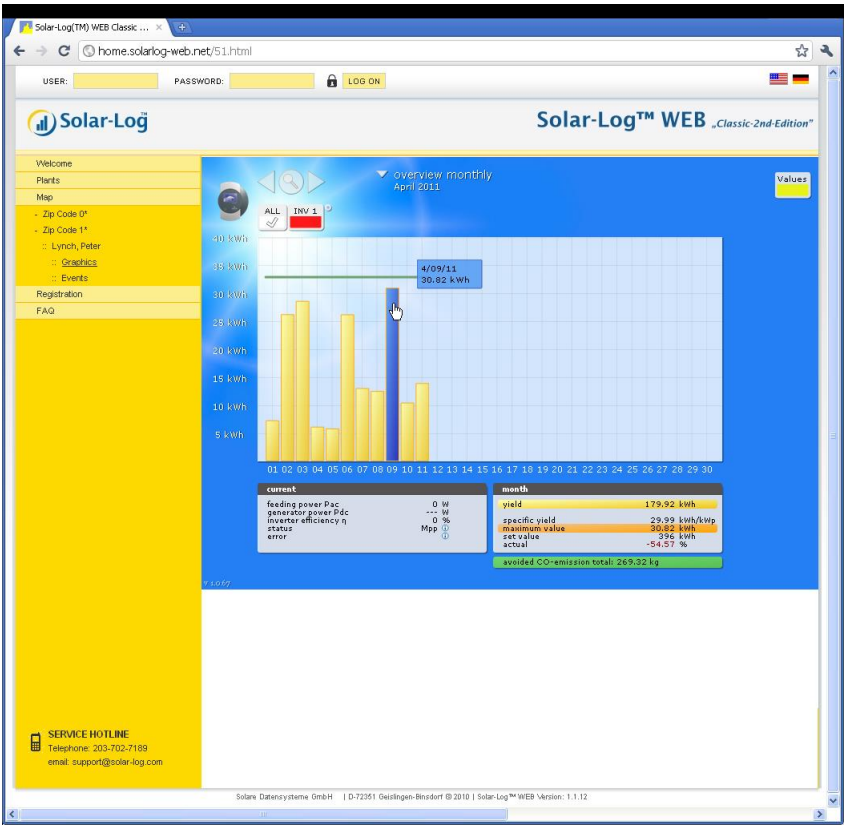

The daily yields for one month are shown as a total in a bar graph. The dark green line shows the target value for the month.

1 Move the mouse over a day bar.
→ The corresponding day's yield is shown.

2 Click on an individual bar to switch to the corresponding day overview.

5.3.5 Year overview

- Select **Overview Yearly** in the navigation menu.

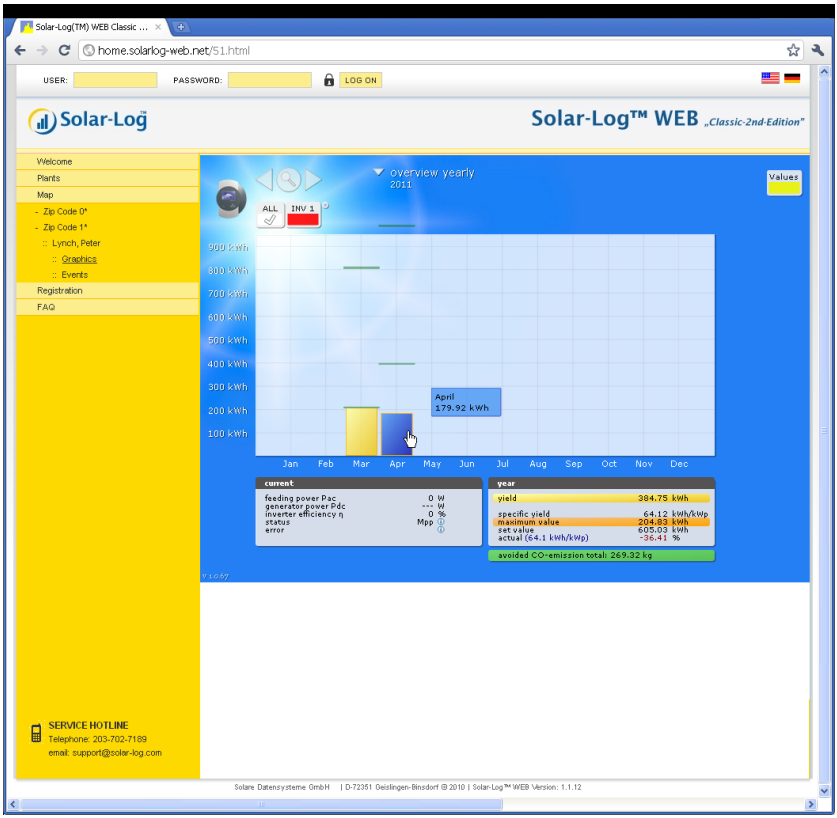

The individual monthly yields are shown as a total in a bar graph. The dark green line shows the target value for the month.

The "Forecast" value is calculated using the yields already achieved for the year and is then projected using the target yields for the remaining months of the year.

1 Move the mouse over a month bar.
→ The corresponding month's yield is shown.

2 Click on an individual bar to switch to the corresponding month overview.

5.3.6 Overview of all years

- Select **Overview all years** in the navigation bar.

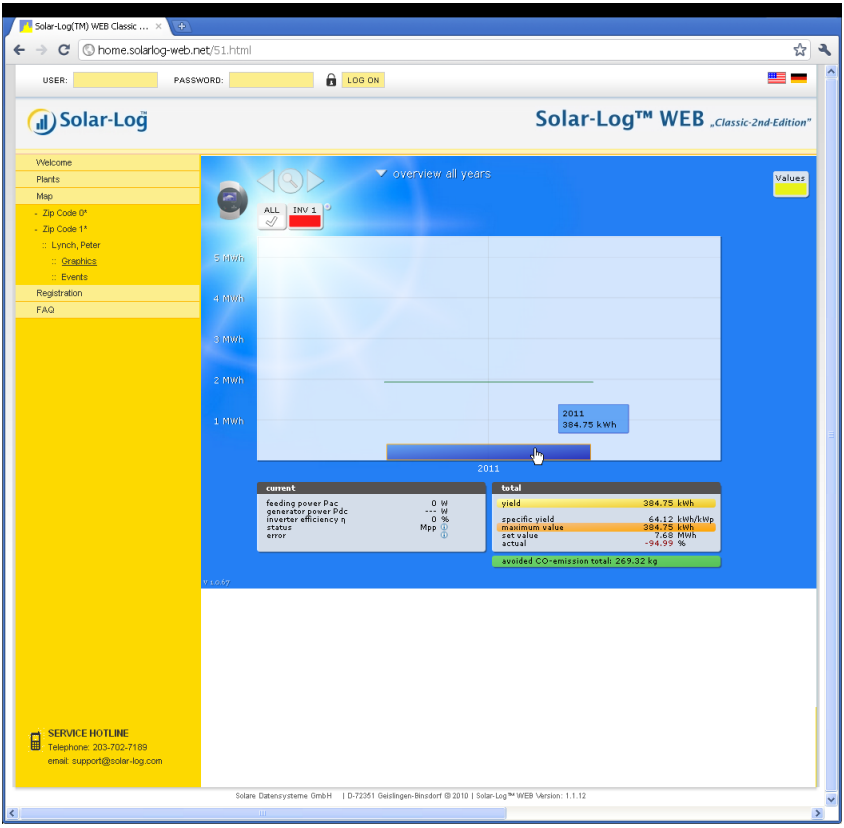

The individual annual yields are shown as a total in a bar graph. The dark green line shows the target value for the year. For the current year two green lines are shown:

- The top line shows the annual target.
- The bottom line shows the annual target accumulated to the present day.

3 Move the mouse over a year bar.

→ The corresponding year's yield is shown.

4 Click on an individual bar to switch to the corresponding year overview.

5 Click on **Line overview, years** to display a line view for the total yield.

5.3.7 Calling up and filtering the event log

- Select **Events** in the left navigation bar.
  → The complete list of all system events is shown.

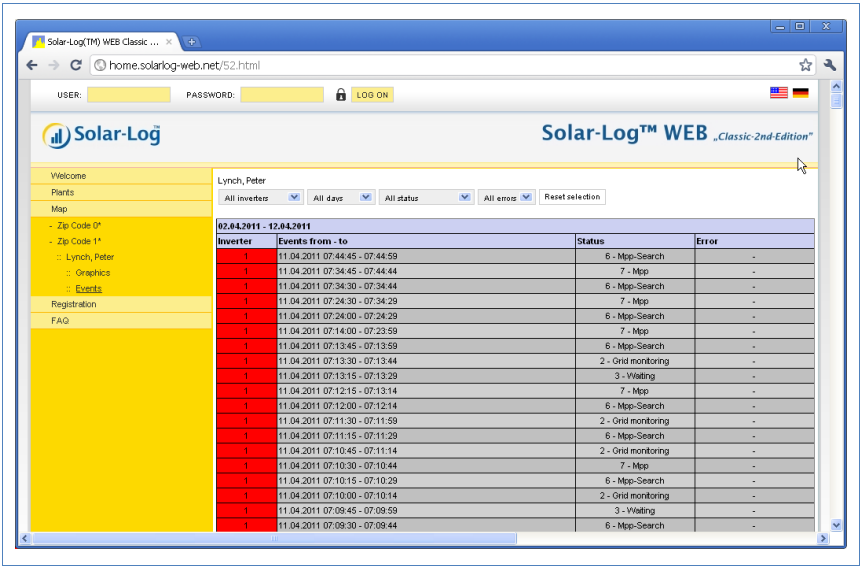

To display only certain events or events that occurred on a certain day in the previous 35 days, use the filter function.

1 Select the desired inverter in the **All inverters** drop-down menu.
  → Only the events for the selected inverter are shown.

2 Narrow down the selection by selecting the desired day in the **All days** drop-down menu.
  → Only the events for the selected day are shown.

3 Narrow down the selection further by selecting the desired status in the **All status** drop-down menu.
   → Only those statuses are available which occurred within the selected period of time.

4 Narrow down the type of error by selecting the desired error in the **All errors** drop-down menu.
   → Only those errors are shown which occurred within the selected period of time.

5 Click on **Reset selection** to cancel all of the filter settings.

6 Using the Solar-Log™ APP iPhone V3 for iPhones

We offer a Solar-Log™ App iPhone V3 for iPhones, iPads and iPod Touches to allow you to access your plant data at any time and from any location. The App is available for free from the Apple App Store.

The App displays current and past yield data in a graphical form. In addition, there is the possibility to display power consumption. Intuitive finger gestures (swipes) enable you to quickly navigate between different time period views (daily, monthly, yearly and total).

Note

When starting the App for the first time, there is a brief introduction on how to operate the App.

Requirements

Our Solar-Log™ App is compatible with every iPhone, iPod Touch and iPad starting from iOS version 3.0.

Note

The Solar-Log™ App only runs with the server solution Solar-Log™ Web Classic 2 and the WEB Commercial Edition from Solare Datensysteme GmbH.
The Solar-Log™ Web Classic 1* and Self-made* editions are not supported.

*It only pretains to new plants, existing plants will continue to be displayed.

6.1 Installing the App

The App is available for free from the Apple App Store.

Loading the App

6 Search for "Solar-Log" in the ***Apple App Store***.

7 Follow the directions to download and install the App on your mobile iOS device.

Start the App

8 Start the App on your iOS device.
→ The start screen is displaed with the saved plant.

6.2 Add plants

You can monitor as many plants with the App as are connected with a Solar-Log™.

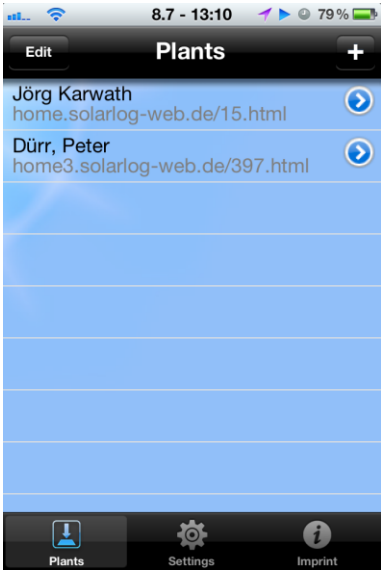

9 Touch the + symbol.
→ The screen ***New Plant*** is then displayed.

10 Enter the ***URL***, ***Serial Number*** and ***Password*** from the registration email that you received from Solare Datensysteme GmbH.

11 ***Save*** the added plant.

12 The plant now appears with a name and URL in the plant menu.

6.3 Retrieving Yield Data

After your plant has been correctly recognized, the yield data is displayed in the plant overview.

Note

The data is only updated when your iOS device is connected to the internet.

6.3.1 How to navigate between different time periods

13 Start the App

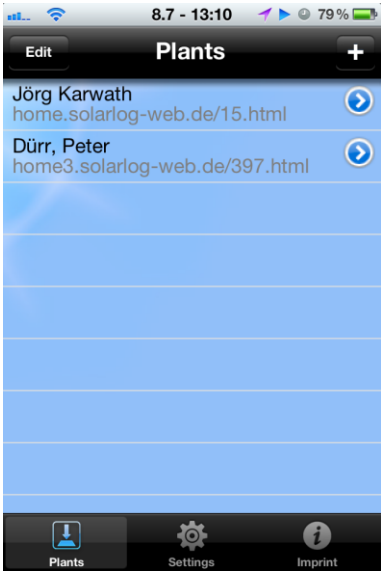

14 Touch the blue arrow next to the name of your plant.

The current Daily Overview is displayed with the yield values, percentage (based on the forecast) and consumption (only if a meter is connected and activated, see the chapter Retrieving Plant Data).

15 By touching the screen, a menu appears on the top and bottom the screen from which you can select the desired view.

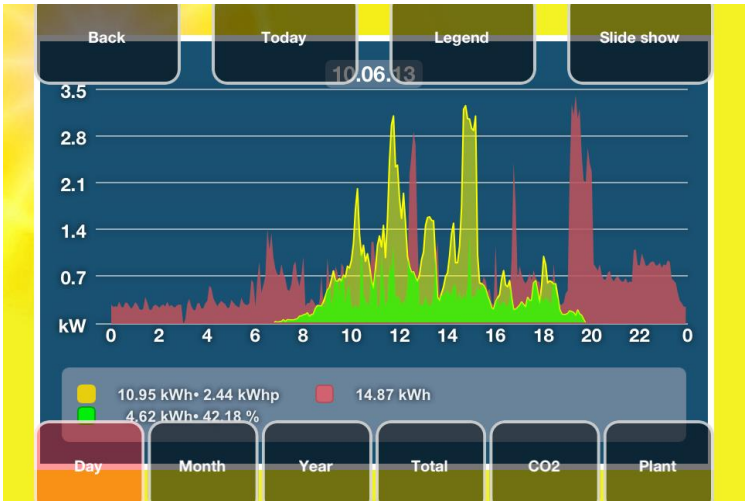

6.4 The top menu bar

The following items can be selected from the top menu bar:

- Back
- Today
- Legend****
- Slide show

Touch Back to go back to the plant settings page.

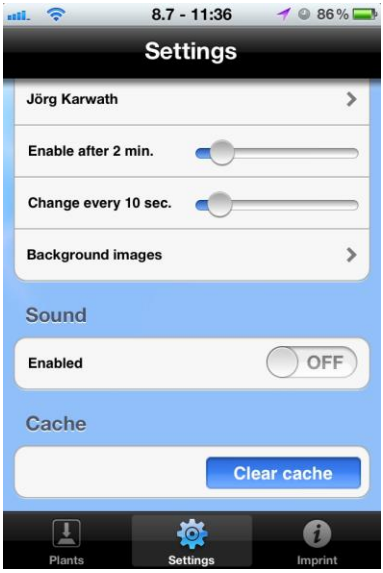

The following settings can be configured:

- Update intervals
  → Plant update intervals from 5 to 60 minutes.
- CO_2
  → The CO_2 factor can be adjusted from 0.0 to 1.0 (see the chapter Viewing CO_2 Savings).
- Slide Show (see the chapter The Yield Data as a Slide Show).
- Sound (see the chapter The Yield Data as a Slide Show).
- Clear cache.
  → Delete all of the App's cached data. It is necessary to restart the App.

Touch Today from any view to go to the current Daily values.

Touch Legend*** to hide and unhide these values.

Touch Slide Show to start this with the previously adjusted settings. (see the chapter The Yield Data as a Slide Show)

6.5 The bottom menu bar

The following items can be selected from the top menu bar:

- Day
- Month
- Year
- Total
- CO2
- Plant

6.5.1 Day

16 Touch the screen.
→ The bottom menu bar is displayed.

17 Select ***Day*** to go the Daily Values.

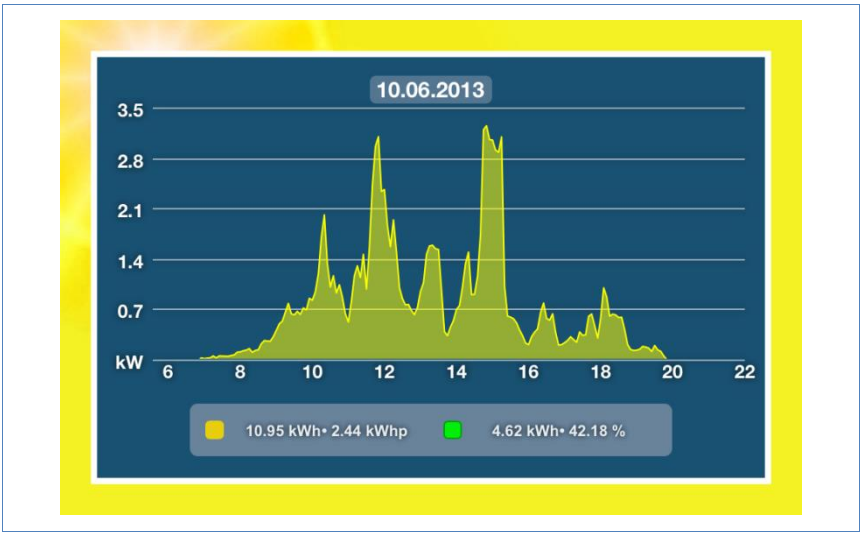

The daily yields are displayed as a graphical curve.

18 Rotate iOS device horizontally for a better view.

19 Swipe to the left go to the next view or to the right to go back to the previous view.

20 Swipe up or down to change the module views.

6.5.2 Monthly Overview

21 Touch the screen.
→ The bottom menu bar is displayed.

22 Select ***Month*** to go the monthly values.

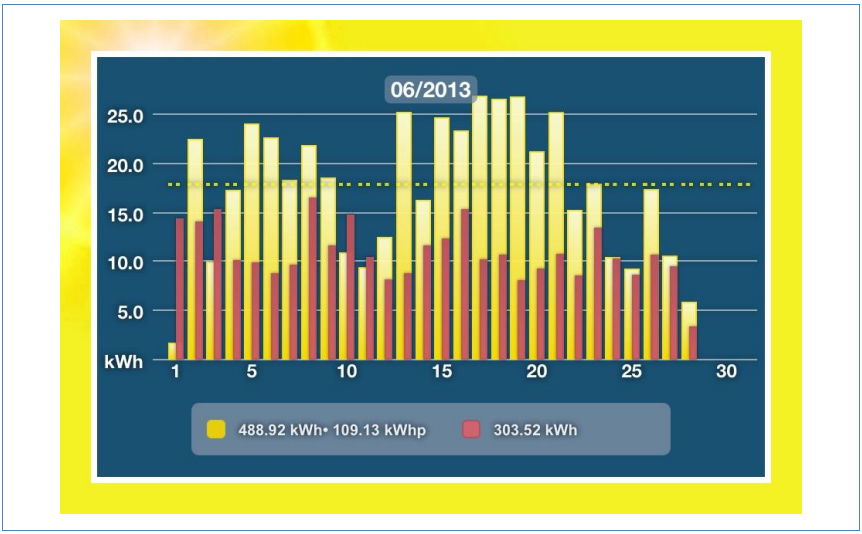

The daily yields of the selected month are displayed as a bar graph. The dotted line in the view displays the plant's calculated target value based on the annual forecast.

23 Swipe to the left go to the next view or to the right to go back to the previous view.

24 Swipe up or down to change the module views.

6.5.3 Annual Overview

25 Touch the screen.
→ The bottom menu bar is displayed.

26 Select ***Year*** to go the yearly values.

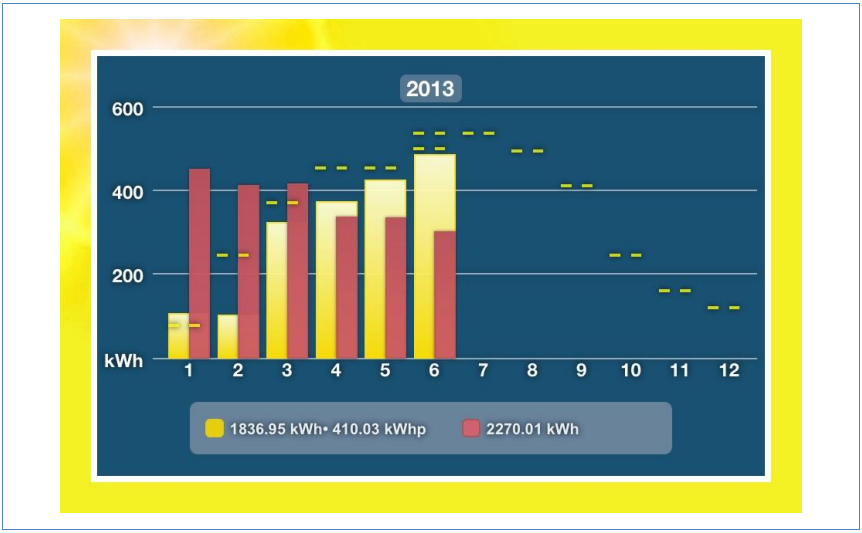

The monthly yields of the selected year are displayed as a bar graph. The dotted line in the view displays the plant's calculated target value based on the annual forecast.

27 Swipe to the left go to the next view or to the right to go back to the previous view.

28 Swipe up or down to change the module views.

6.5.4 Total Overview

29 Touch the screen.
→ The bottom menu bar is displayed.

30 Select ***Total*** to go the total view.

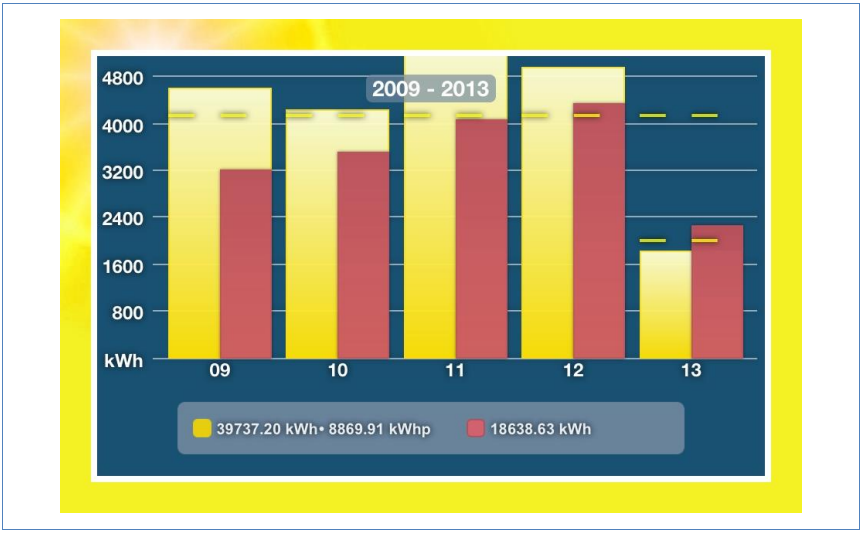

The annual yields of the total view are displayed as a bar graph. The dotted line in the view displays the plant's calculated target value based on the annual forecast.

31 Swipe up or down to change the module views.

6.6 Viewing CO_2 Savings

32 Touch the screen.
→ The bottom menu bar is displayed.

33 Select *CO2*.
→ The total accumulated amount of carbon dioxide emissions that have been prevented by your plant is displayed.

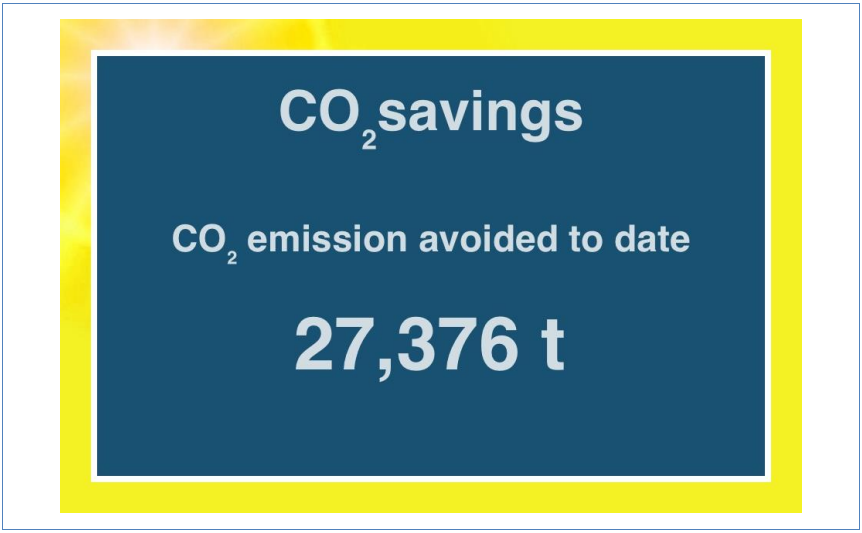

→ The CO_2 savings depends on how much CO_2 emissions are produced to generate 1 kWh of power. (g/kWh)

6.7 Retrieving Plant Data

34 Touch the screen.
→ The bottom menu bar is displayed.

35 Select ***Plant*** to go to the page with the plant details.

The page displays the following plant data:

- Plant Name
- Location
- Module
- Inverter
- Plant size
- Installation Date

- Orientation of the plant and pitch of the modules
- Number of Modules
- Consumption
- Inverter Label
- Connected Senors

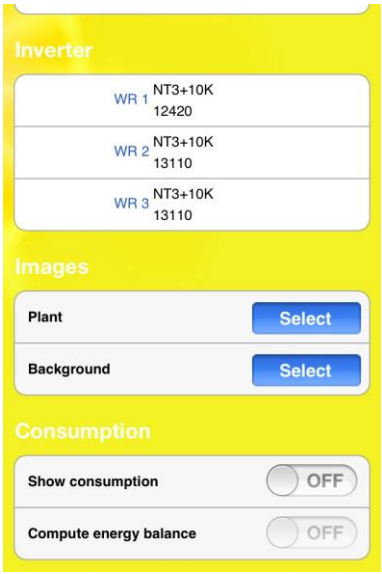

In addition, you can also adjust the following settings from these menu items:

- Images.
  → Select plant image.
  → Select background image.
- Consumption (can only be activated if a meter is connected).
  → Activate display power consumption (has to be manually activated)
  → Activate calculate energy balance (has to be manually activated)

6.8 The Yield Data as a Slide Show

With the slide show function, you can turn your iOS device into an "electronic picture frame". The "picture frame" alternates in displaying the various modules of the Solar-Log™ App.

The Slide Show function can be configured in the settings menu.

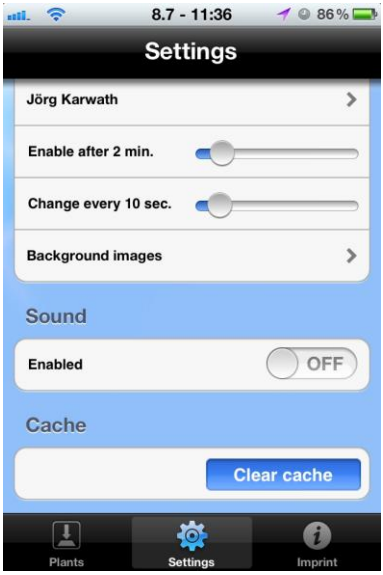

In addition to the activating the the Slide Show function, the options can be configured:

- Enable after - adjustable from 1 to 10 minutes.
  → Time settings for when the Slide Show starts
- Change every – adjustable from 5 to 60 seconds.
  → Interval in which the images switch.
- Background image.
  → Adjust which background image is set for the Slide Show.
- Sound.
  → Here the standard sound can be enabled. By default, this function is deactivated.
- Cache
  → Delete all of the App's cached data. It is necessary to restart the App.

6.8.1 Start the Slide Show

36 Tap the screen. The menu bar is displayed.

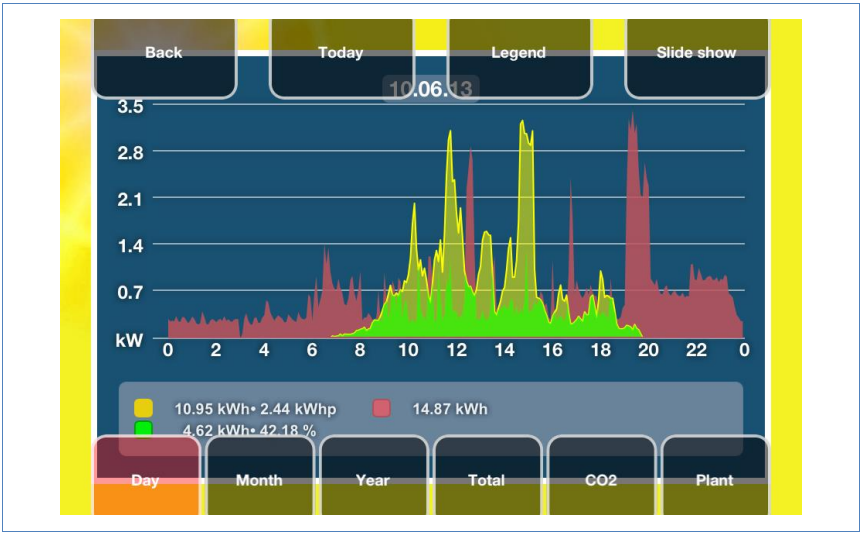

37 Select ***Slideshow*** from the top menu bar.
→ Now you can always see the current values.

7 Using the Solar-Log™ Android App

We offer a Solar-Log™ App for Android tablet PCs and smartphones to allow you to access your plant data at any time and from any location. The App is available for free from the Google Play store.

The App displays current and past yield data in a graphical form.

Note

The screen shots and instructions refer to using the Solar-Log™ App with Android tablets. The operating instructions for smartphones may differ. The differences are explained in detail in **Chapter 1.9** ↘ Using the Android App with a smartphone.

Requirements

Our Solar-Log™ App is compatible with every Android tablet PC and smartphone starting from OS version 2.3 Gingerbread (4.0 Ice Cream Sandwich is recommended).

The Solar-Log™ App runs with the server solution from C2 and the WEB Commercial Edition from Solare Datensysteme GmbH.

7.1 Installing the App

The App is available for free from the Play store.

Loading the App

1. Search for "Solar-Log" in the ***Play store***.
2. Follow the ***directions*** to download and install the App on your smartphone.

Start the App

3 Start the ***App*** on your smartphone.
→ The start screen is displayed.

7.2 Add plants

You can monitor as many plants with the App as are connected with a Solar-Log™.



1 Touch the ☰ symbol in the toolbar.

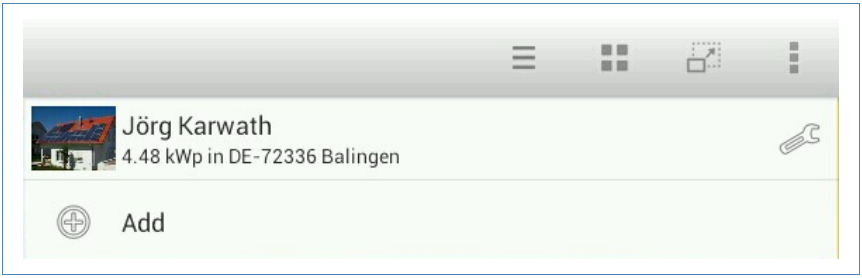

2 Touch the ⊕ symbol.

→ The screen ***Solar-Log™ App Access Data*** is then displayed.

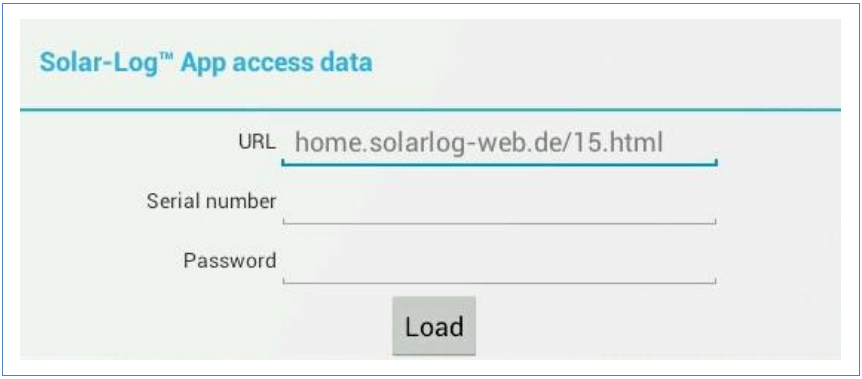

3 Enter the ***URL***, ***Serial Number*** and ***Password*** from the registration email that you received from Solare Datensysteme GmbH.

4 After that tap on the button ***Load***.

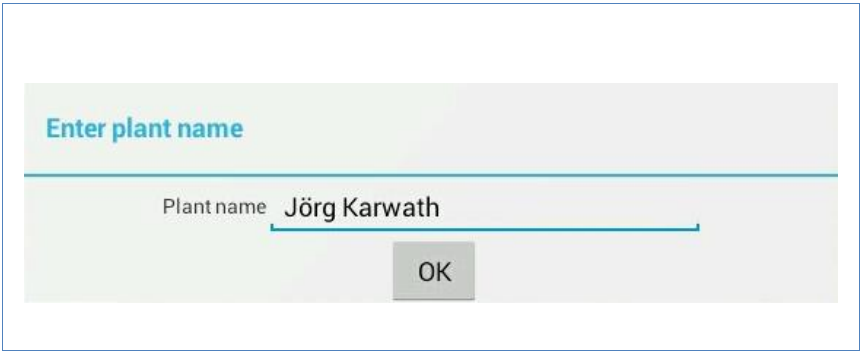

5 After that the ***Plant Name*** appears. Check that everything is correct and then touch ***Ok***.

6 The plant's current daily values will then be loaded. This can take a moment.

7.3 Plant Settings

By selecting add ***Plants***, you can adjust the ***Settings*** for the view displayed.

1 Tap on to go the ***Plant***.

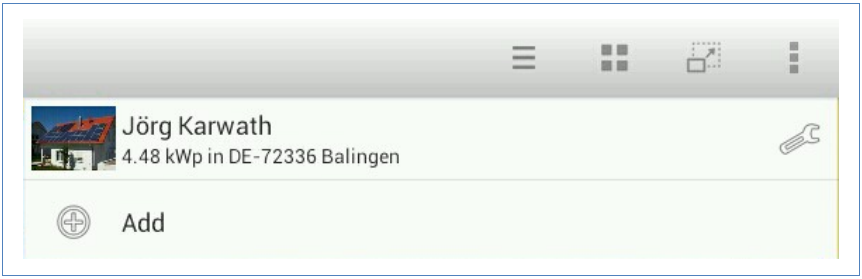

2 Tap on the symbol to get to the following settings:

- S0 meter
- Management

7.3.1 S0 meter

By selecting ***S0 meter***, you have the option to adjust the settings for the view displayed.

1 Tap on the symbol to get to the settings.

2 Tap on the ***S0 meter***.

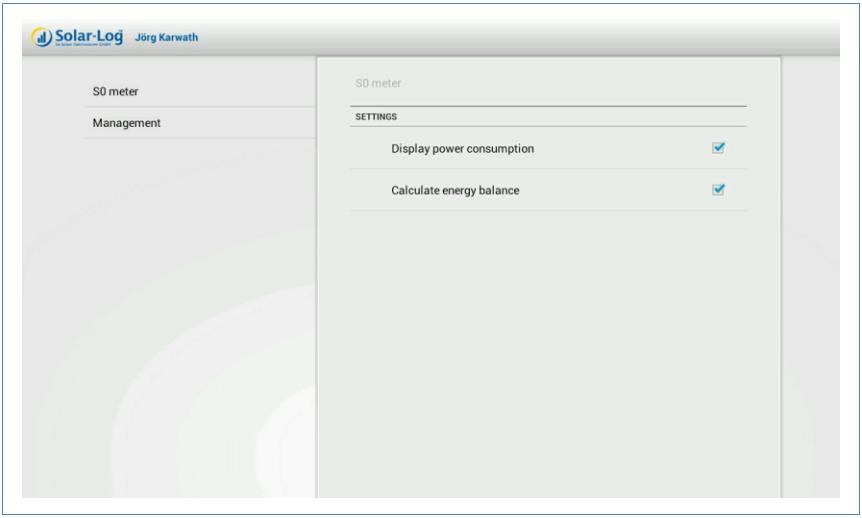

3 The S0 meter's view settings has the following options:
→ Display power consumption
→ Calculate energy balance

7.3.2 Management

Be selecting ***Management***, you can update the plant configuration, reset yield data or also delete the plant.

1 Tap on the symbol to get to the settings.

2 Tap on ***Management***.

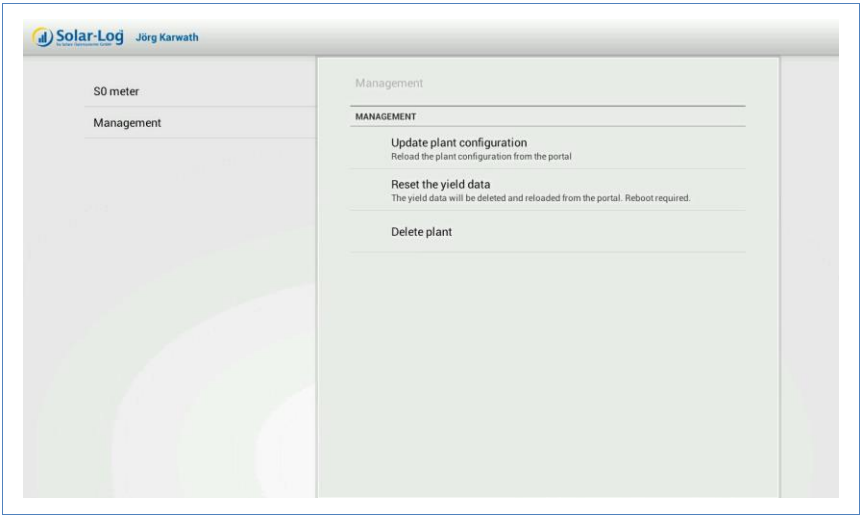

3 In the ***Management*** section, the following options are available:

- → ***Update plant configuration***. Reload the plant configuration from the portal.
- → ***Reset the yield data.*** The yield data will be deleted and reloaded from the portal. Reboot required.
- → ***Delete plant.*** This plant can be completely deleted here.

7.4 The Toolbar

You can select the desired menu from the toolbar at the top right corner.



Use the symbol to add a plant. (See section **1.2** ↗)

By selecting the symbol, you can display various yield values. (See section **1.3** ↗)

- Day
- Month
- Year
- Total
- CO2

Tap on the symbol to start the slide show. (See section **1.8** ↘)

By selecting the symbol, you can perform various actions. (See section **1.7** ↘)

- Update
- Today
- Settings
- End

7.5 Retrieving Yield Values

After your plant has been correctly recognized, the yield values are displayed with the current daily values in the overview.

Note

The data is only updated when your mobile device is connected to the internet.

By selecting the symbol, you can display various yield values.

- Day
- Month
- Year
- Total
- CO2

7.5.1 Daily Overview

1 Tap on the symbol in the toolbar at the top right corner of the screen.

→ The navigation screen then appears.

2 Select ***Day*** to go the daily overview.

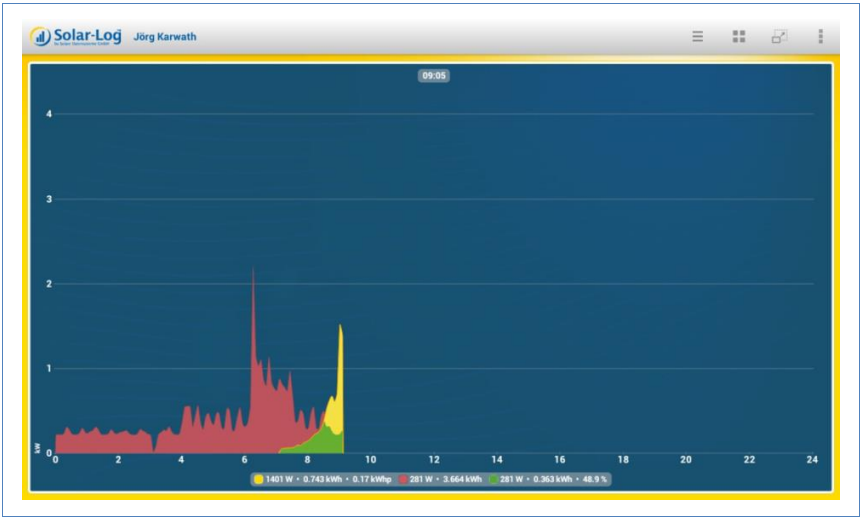

3 Swipe to the left go to the next view or to the right to go back to the previous view.

4 Swipe up or down to change the module views.

7.5.2 Monthly Overview

1 Tap on the symbol in the toolbar at the top right corner of the screen.
→ The navigation screen then appears.

2 Select ***Month*** to go the monthly overview.

The daily yields of the selected month are displayed as a bar graph.

3 Swipe to the left go to the next view or to the right to go back to the previous view.

4 Swipe up or down to change the module views.

7.5.3 Annual Overview

1 Tap on the symbol in the toolbar at the top right corner of the screen.

→ The navigation screen then appears.

2 Select *Year* to go to the annual overview.

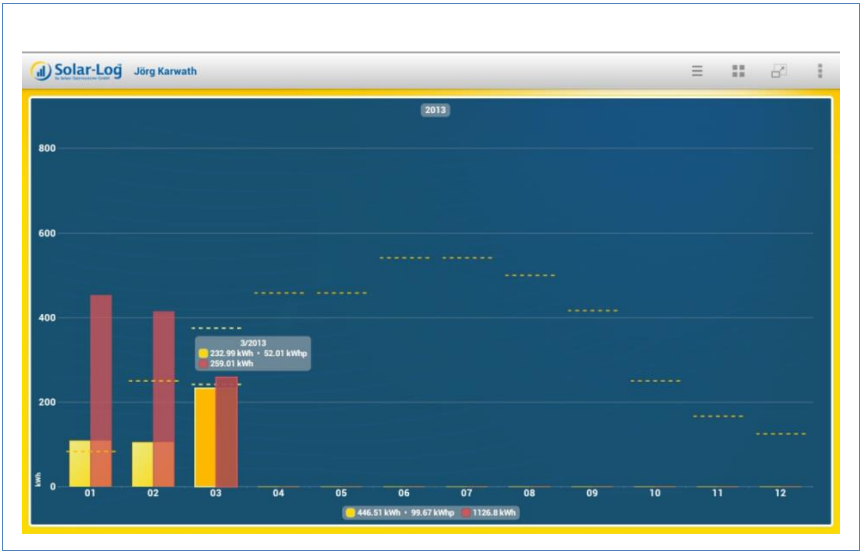

The monthly yields of the selected year are displayed as a bar graph.

3 Swipe to the left go to the next view or to the right to go back to the previous view.

4 Swipe up or down to change the module views.

7.5.4 Total Overview

1 Tap on the symbol in the toolbar at the top right corner of the screen.

→ The navigation screen then appears.

2 Select ***Total*** to go the total overview.

3 Swipe up or down to change the module views.

7.6 Viewing CO_2 Savings

1 Tap on the symbol in the toolbar at the top right corner of the screen.

→ The navigation screen then appears.

2 Select ***CO_2***.

→ The total accumulated amount of carbon dioxide emissions that have been prevented by your plant is displayed.

The savings shown is calculated using the quantity of carbon dioxide that would have been created in order to generate the same amount of energy using fossil fuels.

7.7 App Settings

Tap on the symbol in the toolbar at the top right corner of the screen.

→ The navigation screen then appears.

- Update
- Today
- Settings
- End

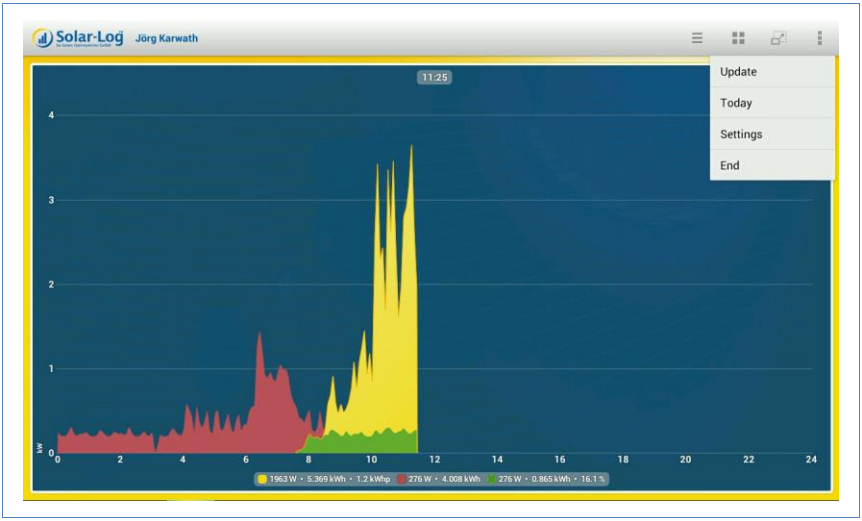

→ Select ***Update*** to update the plant's data.

→ Select ***Today*** to leave the yield data and to switch to the current daily overview.

→ Select ***End*** to quit the application.

By selecting ***Settings*** from the menu, the following categories are available:

- Overall

- Slide show
- Legal Disclaimer

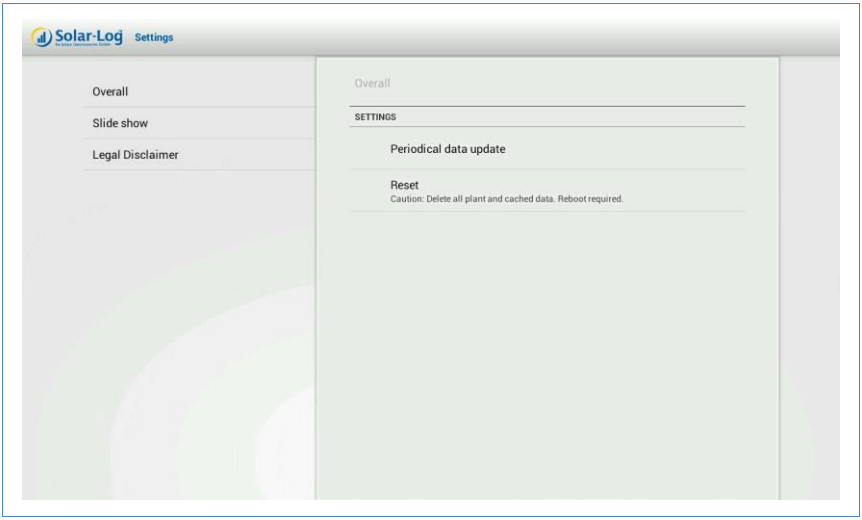

7.7.1 Periodical data update

1 Under ***General***, tap on ***Periodical data update***
→ The following setting options will become visible.

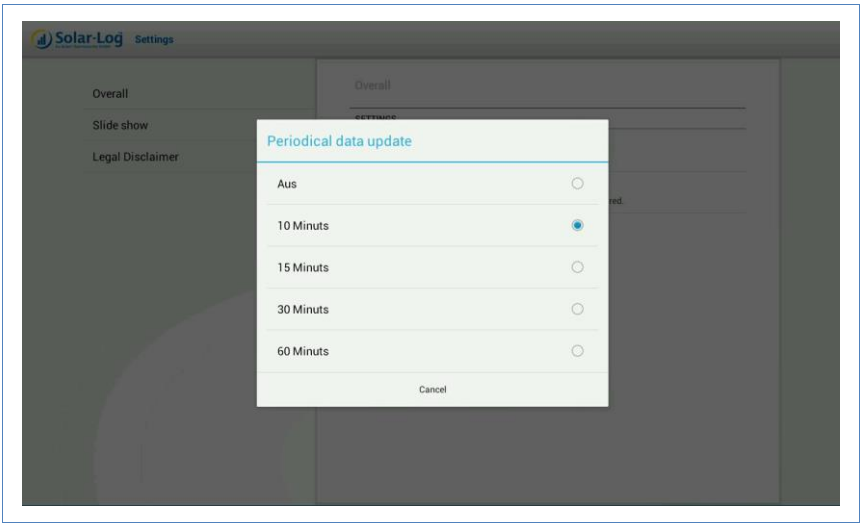

2 Tap on the update interval to automatically update the data. The window automatically closes after the selection.

7.7.2 Reset

With the ***Reset*** function, you can delete all of the plants and cached data.

After tapping on ***Reset***, you will receive the following message:

→ Click on ***Ok*** to confirm the selection and to delete the plants and cached data. (The application automatically closes and has to be restarted.)

→ By clicking on ***Cancel***, you return to the main menu.

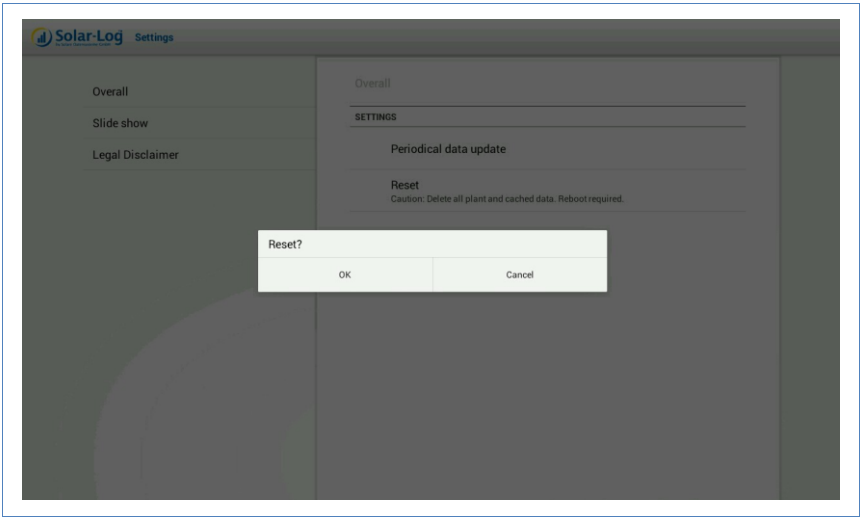

7.7.3 Slide show

In the ***Slide Show*** menu, you have the option to adjust the display duration settings and to select a background image.

By selecting ***Slide Show***, the following settings are available:

- → ***Display duration***. You can determine after how many seconds the image should switch.
- → ***Background image***. You can select the background image that is to be displayed when the respective value is activated.

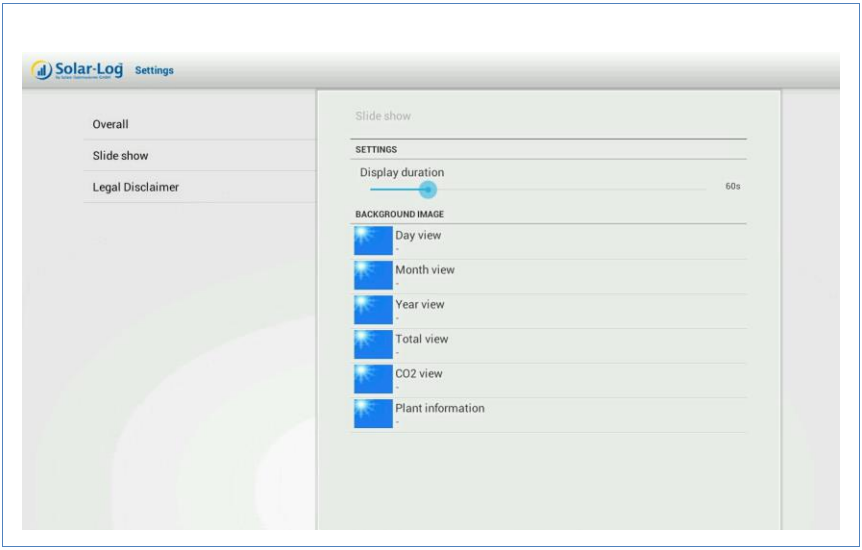

7.7.4 Legal Disclaimer

By selecting ***Legal Disclaimer***, you can see the App's version and who is legally responsible.

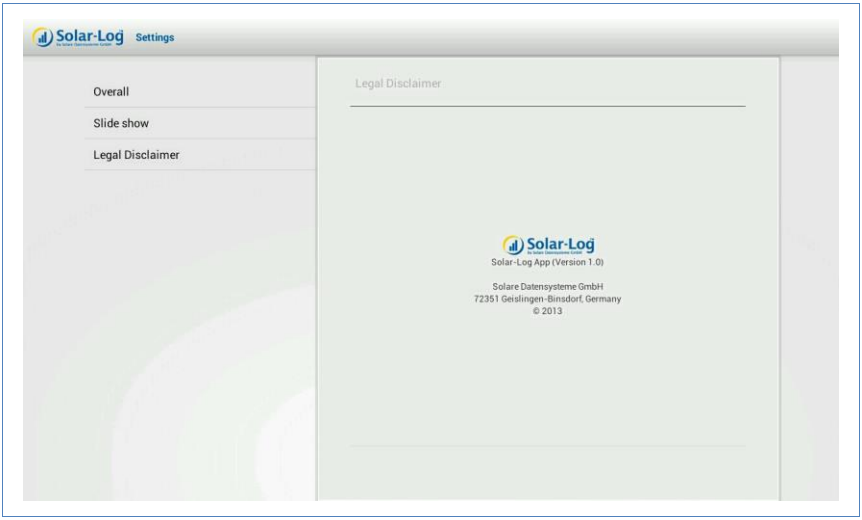

7.8 The Yield Data as a Slide Show

With the slide show function, you can turn your tablet PC or smartphone into an "electronic picture frame". The "picture frame" alternates in displaying the various modules of the Solar-Log™ App.

Note

Proper cradles to mount the device are available at specialist shops.

1 Tap the screen.

→ The slide show function appears in the top right edge of the screen by touching the symbol.

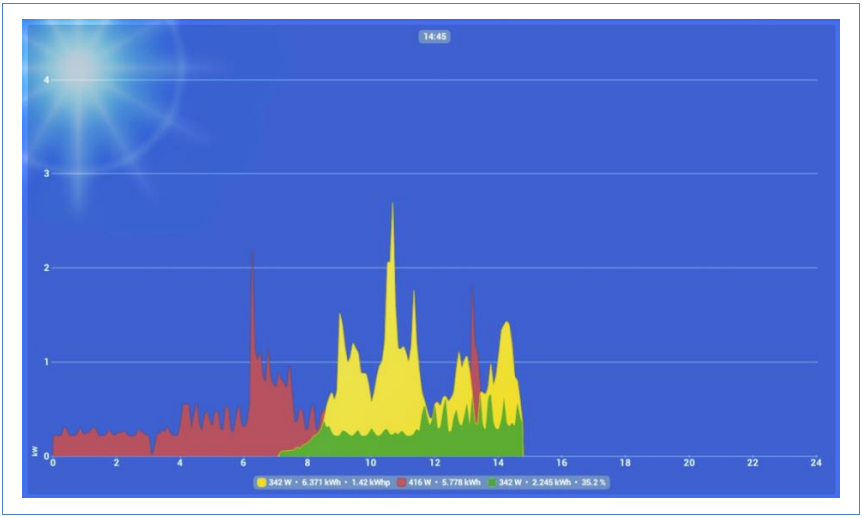

2 Tap on and place your tablet PC or smartphone into a cradle.

→ Now you can always see the current values.

7.9 Using the Android App with a Smartphone

When using the Android App with a smartphone, some menus differ from those with a tablet PC.

In contrast to the tablet PC, there are minor differences between the vertical and horizontal format.

The configuration possibilities for tablet PCs and smartphones, however, are identical.

7.9.1 Smartphone vertical format

Use the ☰ and 🔧 symbols from the toolbar in the top right corner of the screen to add plants and adjust settings.

Similarly, use the ⊞ symbol to select the yield data.

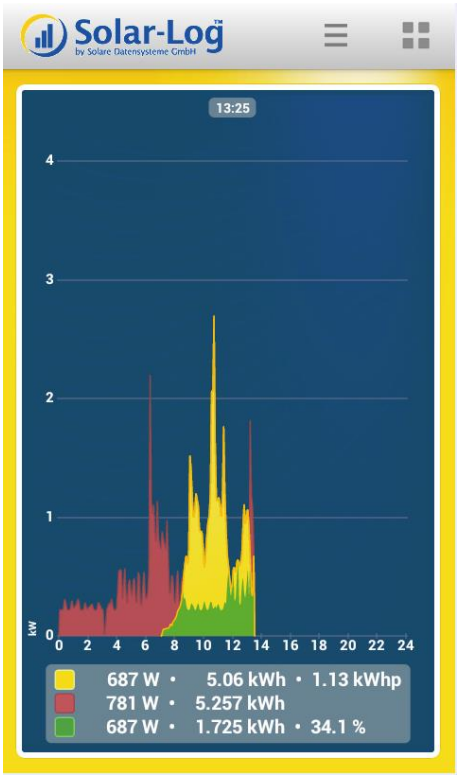

When in the vertical format, click on the smartphone's ***Menu button*** for the ***App Settings*** and ***Slide show***. (See your smartphone's manual.)

After pressing the ***Menu button***, the options that are accessible with the App settings symbol and Slide show symbol on the tablet PC appear.

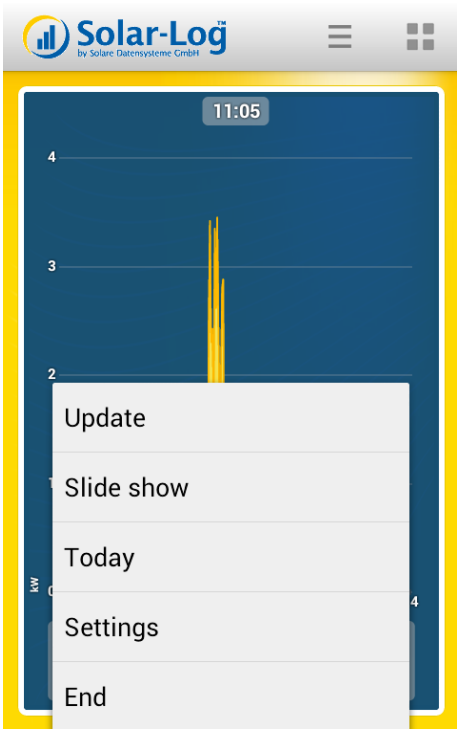

Use the ***Back button*** to return to the program.

7.9.2 Smartphone - horizontal format

The only difference between the horizontal and vertical format is that slide show can also be selected from the toolbar.

The App settings have to be accessed with the smartphone's ***Menu button***.

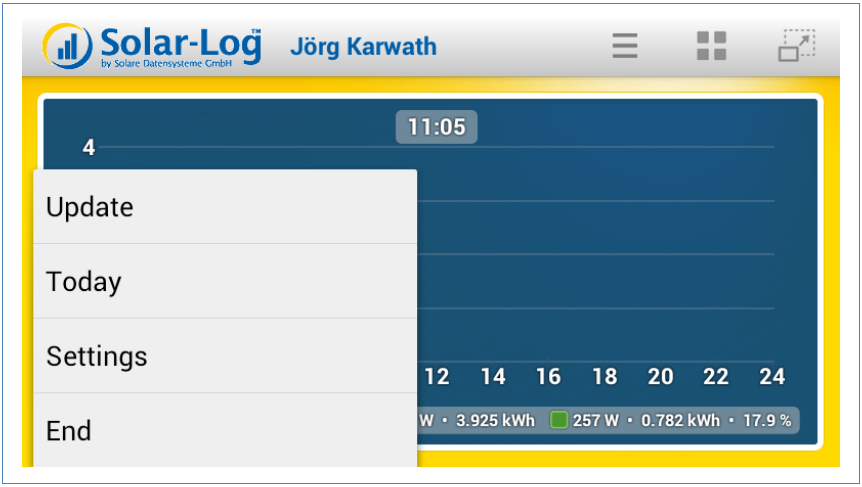

Use the ***Back button*** to return to the program.

7.9.3 Solar-Log™ Widget for Smartphones

With an Android smartphone, you can display yield reports from your plant with the Solar-Log™ Widget (Activating Widgets: see the user manual).

The Widget allows the plant's current daily yields to be display directly on your smartphone's home screen.

Changing the view:

The view can be directly changed in the App. All you have to do is tap on the Widget.

Adjusting the size and positioning the Widget:

Press on the Widget 1 to 2 seconds to change the size. A box with four points pops up. Move one of the four points to define the size.
To select the Widget's position, press down on the Widget and move it to the desired position.

Note
For Android versions less than 4.0, 2x1, 2x2 and HD can selected for the Widget.
Only HD is available for Android versions greater than 4.0.
The HD format for the newer Android versions, however, can be displayed in variable sizes.

8 Cleaning and care

8.1 Cleaning tips

Caution

Be sure to unplug the device prior to cleaning it!

- Clean the device on the outside only with a dry, lint-free cloth.
- If very dirty, the device can be cleaned with a slightly damp cloth and a commercially available household cleaner.

Caution

When cleaning, ensure that no moisture enters the device!

8.2 Care tips

- Ensure that the device is not exposed to any moisture at the location where it is kept.
- Ensure that the device is not exposed to any heat or strong sunlight at the location where it is stored.
  Please take note of the Technical Data (↗page 127).

9 Malfunctions

9.1 Status display for the LEDs

On the front side of the device in the lower left area there are four LEDs that show the operating status of the device.

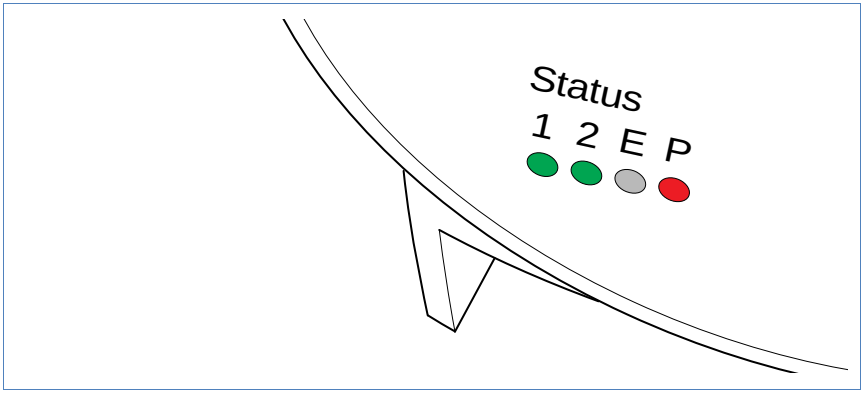

Depending on the operating status, LED **1**, LED **2**, and LED **E** can flash quickly or slowly, be permanently illuminated or not be illuminated.

The red LED **P** indicates the power supply.

The LED **E** is generally not illuminated during normal fault-free operation. If it is illuminated or flashing, this indicates that a system malfunction has occurred.

Normal operation

Normal operation			
LED 1	**LED 2**	**LED E**	**Meaning**
quickly	quickly	off	Max. 5 min.: Device starts
illuminated	slow	off	Import time via internet
off	quickly	off	Read configuration from inverter

Normal operation			
illuminated	illuminated	off	Normal operation, inverter online
illuminated	off	off	Normal operation, inverter offline

System malfunctions

System malfunctions			
LED 1	**LED 2**	**LED E**	**Meaning and possible remedy**
quickly	quickly	off	For 5 min. during initialization: Error! ▸ Unplug power plug and plug in again.
illuminated	slow	slow	Import time via internet failed: ▸ Set time manually ▸ Check internet access
off	slow	slow	Configuration invalid or nonreadable: ▸ Check interface ▸ Check cable ▸ Perform re-start (↗page 125)
		illuminated	**Only for Fronius inverters**: No data communication! ▸ Wait until inverters import ▸ Check wiring
		quickly	Plant has signalled a fault. ▸ Cancel on the touchscreen in the **Analysis/reports** menu (↗page 44)

9.2 Remedying faults yourself

You can remedy faults yourself by restarting the device. A restart is necessary if the device no longer reacts to entries in the web browser. All of the settings made on the device remain in place, as does the saved yield data.

To restart the device, use the reset button at the top of the device.

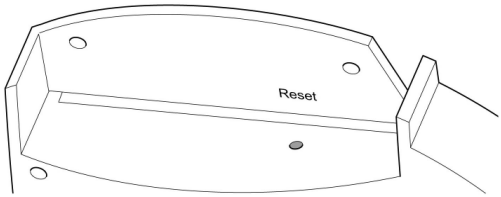

Opening the cover

If the cover is fitted, you must first open the cover of the device.

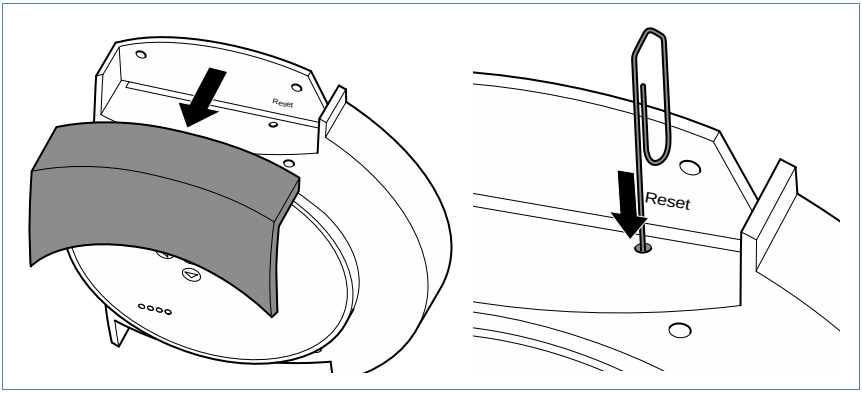

- Pull the cover frontwards to remove.

Performing a restart

1 Press the reset button e.g. with an open paper clip.
→ LED 1 goes out.

3 Release the reset button.
→ After approx. 5 seconds LED 1 illuminates again.
→ After approx. 20 seconds LED 1 and LED 2 start to flash, the device restarts with the set values.

4 Wait until normal operation has recommenced and then close the cover.

Caution
Do not perform a restart by pulling out the power plug!

9.2.1 Obtaining information from the internet

You can also obtain support for operating the device or the settings on our internet site under the following URL:

http://www.solar-log.com/en/service-support/technical-support.html

Here you will also find additional product information and manuals available for download.

9.2.2 Informing a specialist technician

Should problems occur with the Solar-Log^{1000} that are not able to be remedied using them measures described, we recommend that you contact your solar technician or our customer service.

The contact addresses for our customer service can be found on the back of the envelope.

10 Disposal

Caution

Your Solar-Log™ contains electronic components that can release highly toxic substances if burned or disposed of via the domestic garbage disposal system.

- Be sure to dispose of the Solar-Log™ in a recycling center as electronic scrap.

11 Technical data

Supply voltage	12V DC
Energy consumption	approx. 3 watts
Power supply	External wall power supply 12V DC
Dimensions in cm	22.5 / 28.5 / 4 (W x H x D)
Housing	Plastic housing, passively ventilated
Interfaces	Ethernet RJ45 bushing 10/100MBit RS485/RS422 combined S0 impulse in/output (in accordance with DIN43864 and DIN62056) Reset buttons USB
Memory capacity	8 MB RAM + 2 GB SD RAM (internal only)
Protection class	IP 20 (exclusively for inside use)
Temperature range	-10°C to 50°C
Display	4 LEDs for status displays
Mounting	Wall mounted
Weight	0.61 kg

Glossary

Term	Meaning
Account	User account on a server into which the user must log with their name and password.
App	Abbreviation for application, programme
Back-up	Data back-up A method of archiving or to ensure against loss of data.
Browser, web browser	Programme used to display internet sites in the worldwide web
Derating	Loss in power of an electronic component depending on the surrounding temperature, e.g. decrease in output delivered in order to protect against overheating.
DHCP	Dynamic Host Control Protocol. Characteristic setting in local networks in which the IP addresses for the connected devices are assigned by the router.
Firmware	Operating system for your device
Gateway	Router that serves as a "gateway" for network access from outside, e.g. via the internet.
iOS	iOS is an operating system from Apple for mobile devices.
IP address	Network address for the device. Each device in the network is identified by its own number. This number consists of four blocks of maximum three figures. The network address is usually assigned by the router.
Local network	Several computers or network-compatible devices that exchange data with one another within a closed area.

Term	Meaning
MPP	The Maximum Power Point (MPP) is the point of maximum output. It is not constant but depends on the irradiation intensity, the temperature and the type of solar cells.
PDA	Personal Digital Assistant, a form of mobile computer
Server	Computer in the local network or internet which provides the available data to authorised users.
SMS	Short Message Service. Transfer of short messages in text form. They can be received by numerous types of mobile phones.

The copyright of these instructions remains with the manufacturer. No part of these instructions may be may be reproduced in any form or processed, duplicated or distributed using electronic systems without the written consent of Solare Datensysteme GmbH.

Non-compliance resulting in contradiction of the above-mentioned specifications shall result in obligation to provide compensation for damages.

All of the brands mentioned in these instructions are the property of the respective manufacturer and hereby recognised as such.

Solar-Log™
by Solare Datensysteme GmbH

Solare Datensysteme GmbH
Fuhrmannstrasse 9
72351 Geislingen-Binsdorf
Germany

info@solar-log.com
www.solar-log.com

Version June 2013 – 1.1